

INSTRUCTION MANUAL




PARTS LIST

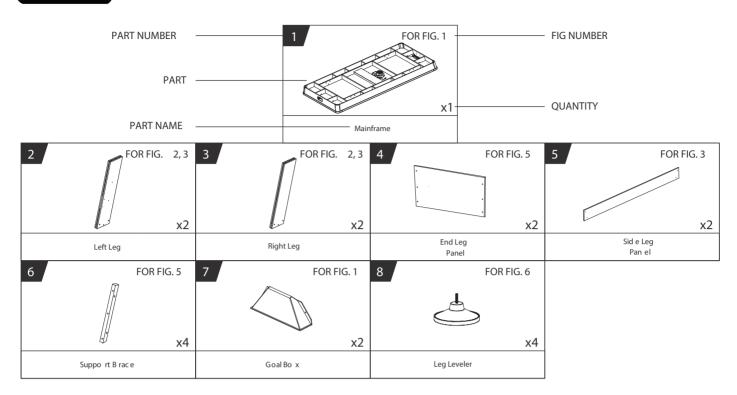


ACCESSORIES

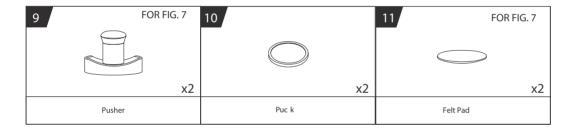

HARDWARE

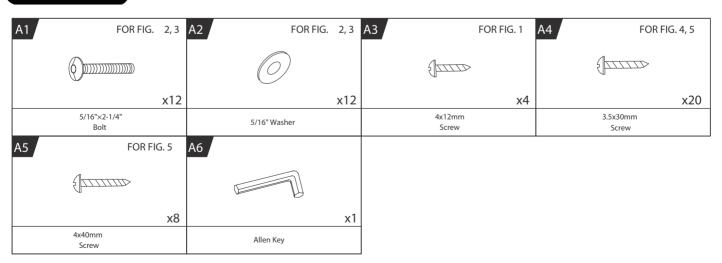


PRE-ASSEMBLED PARTS

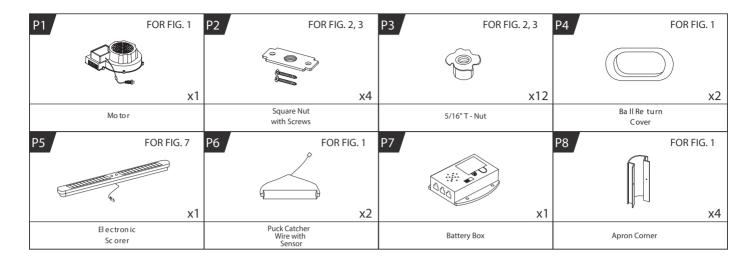



ИНСТРУКЦИЯ ПО СБОРКЕ:


- 1. Find a clean, level place to begin the assembly of your product.
- 2. Verify that you have all listed parts as shown on the parts list pages.


ASSEMBLY

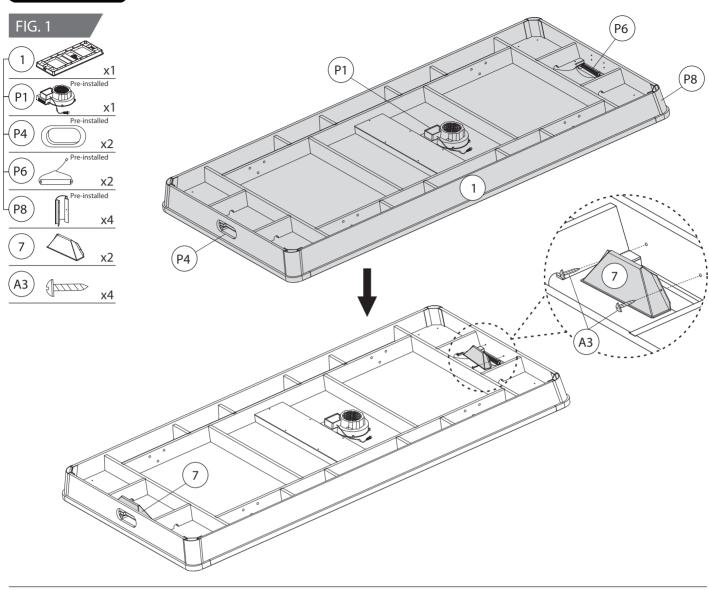

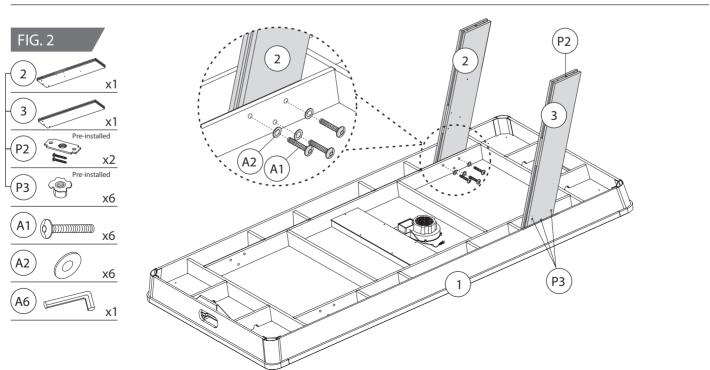

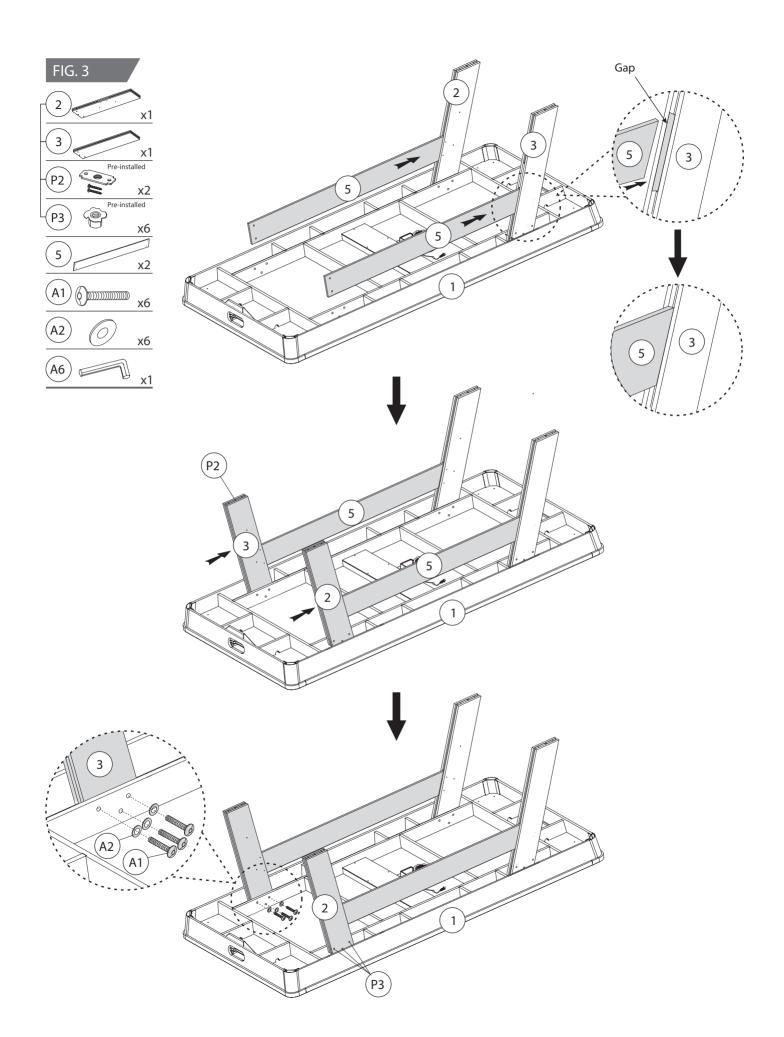


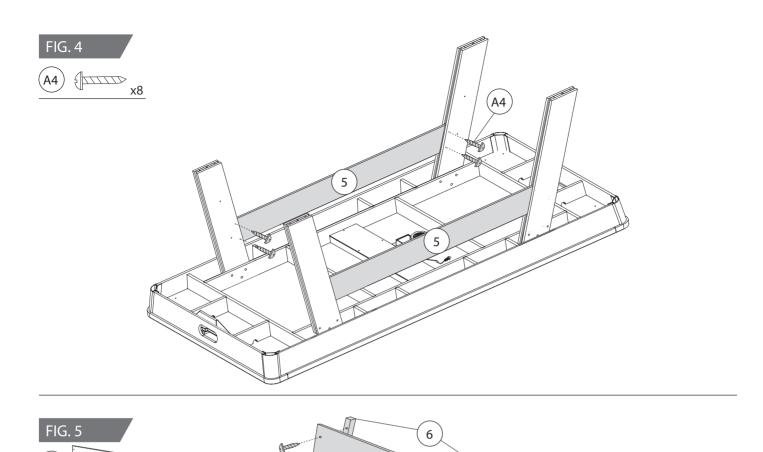


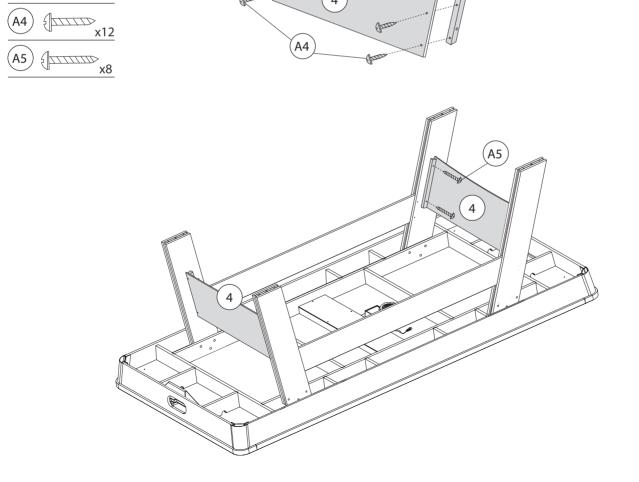

x2

x4

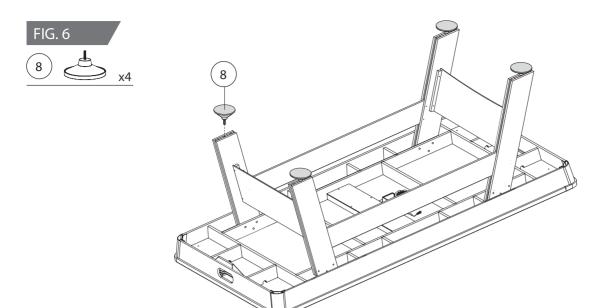


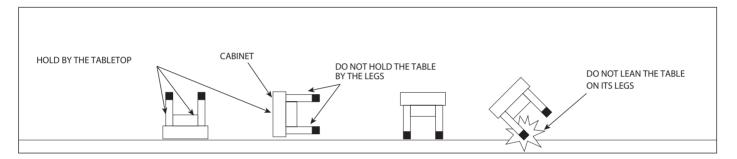

▲ CAUTION

Two strong adults are recommended to turn over the table as shown.

- 1. Lift the table off the ground.
- 2. Turn the table over.
- 3. Place it all feet at the same time on the ground.

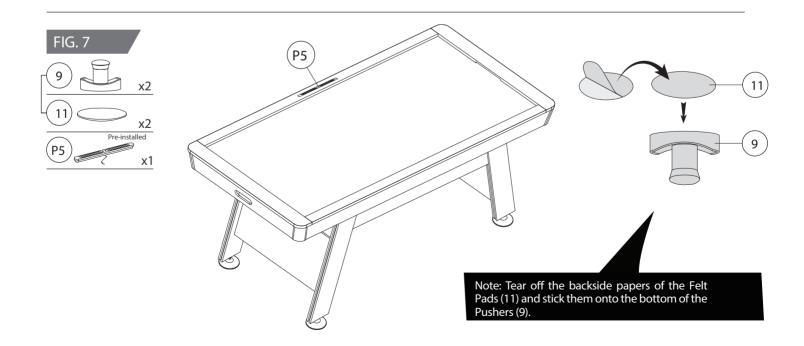




▲ WARNING

- 1. Requires 3x1.5V "AA" Batteries (not included).
- 2. Do not mix old and new batteries.
- 3. Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.

 ELECTRONIC SCORER OPERATION



- 1. Press (1) to turn on and off the power.
- 2. Press to switch on and off the sound.
- 3. Press and hold for three seconds to reset or restart an ew game.

GAME INSTRUCTIONS

- 1. When the "HOME" player scores a point, the "HOME" indicator will show 1 point; when the "VISI TOR" player scores a point, the "VISI TOR" indicator will show 1 point.
- 2. The first player to reach 12 points wins the game.
- 3. After the game, you can press the for three se conds to start an ew game.

 No te: You can press the work but ton at any time, to set the scorer back to the beginning status.
 - No te: You can press (a) at any time to turn off the scorer. Press (b) again to turn it back on.

NOTE: After booting or after the game is over, if there is no operation within 5 minu tes, it will automatically shut down. Please unplug the power when it is not in use.