

Height Adjustment Instructions



Altitude Display

Up and Down keys

4-level Memory Key

Settings Button

USAGE STEPS


Step1 Height Memory

Raise the desk to the desired height, press the M key to enter the setup mode, select any key from 1 to 3 to store the setting, and then press the number key to reach the set height with one touch.

Step2 Child Lock Setting

Press and hold ^ + v until the display shows "LOC", all keys are locked and the setting is complete. Use the same method to unlock the child lock.

Step3 Sedentary Reminder

Press the "Bell " or "A" key, then press the ^/v key to adjust the sedentary reminder time.