 


Specifications

Name	Deluxe Multifunctional Massage Chair
Rated Voltage	220V~50Hz
Rated Power	150W
Security Standard	Class I
Rated time	20minutes

Deluxe Massage Chair

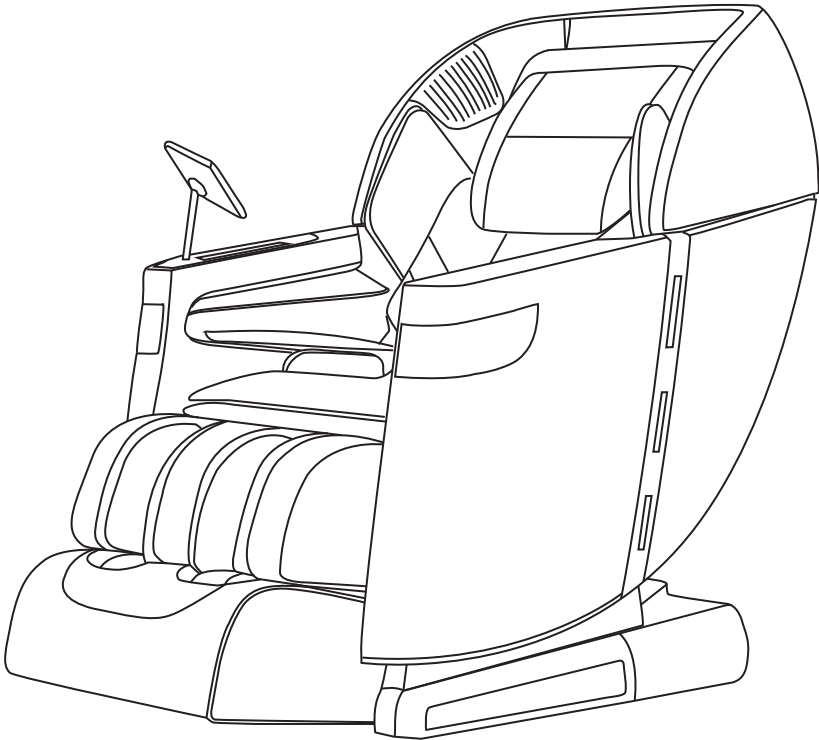

Thank you for purchasing Massage Chair. Before using your massage chair, please read the contents of this instruction manual and refer to it when needed.

Content

Safety and Maintenance.....	2
Function and Efficacy.....	4
Chair Components	5
Chair installing.....	6
Operation Guide	8
Troubleshooting & Notice	10





Troubleshooting

- When plugging in the socket, the massage chair doesn't work, please check if the socket is well or if the power is on.
- When the power is on, the massage chair doesn't work, please change the fuse, and you can find how to change it on page 5 of this instructions.
- The massage chair suddenly stops work, maybe the time is out, or maybe you pressed the “turn off” carelessly.
- There is noise of motor when the massage working, and this is normal phenomenon.
- When time is out and the massage chair stops working, press the key and it will work again.
- When the indicate light flashing but the massage chair can't be turned on, please check if all the key is good, or if the the connector of the remote line is OK.
- When there is something wrong happens while massage, please shut off the power and then turn on again.

Notice

- Please consult this brochure when meeting problems during using the massage chair. If the problem is difficult to resolve, please shut off the power, take out the socket and contact your dealer or manufacturer for advice.
- Please don't dismount or maintenance the massage chair. The guarantee will be invalid if the massage chair damaged because of dismounting or maintenance by yourself.

Function of Remote Key

9. Switch Selection Key: Open the menu firstly, then select the menu switch button manually.
10. LCD(Liquid Crystal Display) : Color screen displays the current operation interface.
11. Backrest Up/ Down Key: Long press “”, the backrest down. Long press “”, the backrest up.
12. Calf Up/ Down Key: Long press “”, the calf down. Long press “”, the calf up.
13. Fix Point Adjustable Key: Press Fix Point “up”, the massage chair robot moving up. Release the key to massage at the current position. Press Fix Point “down”, the massage chair robot moving down. Release the key to massage at the current position.
14. Zero Gravity Key: Turn it on, the massage chair automatic adjustment to zero gravity. Turn it off, the massage chair posture restore the initial state.
15. Shoulder Height Adjustment Key: Press the first time and enter the page of shoulder height adjustment. Then press the second time, it will go back to home screen.
16. Escape Key: Exit the current operation page and back to the last page.
17. Air Pressure Manual Key: Button for switching between full body airbag automatic mode and off.
18. Air Pressure Key: Press the first time, the speed is lowest. Press the second time, the speed is medium. Press the third time, the speed is highest.
19. Heating Key: Waist heating function on/off by manual.
20. Lock Screen: Long press the key for 1.5 seconds to lock touch screen, long press the key again for 1.5 seconds to unlock the touch screen.
21. Bluetooth Key: Turn on/off by manual, open the phone Bluetooth function, and connect with the massage chair bluetooth successfully. Then the music starts playing.

Warning

- Do not use this machine with unsuitable standard voltage.
- Be sure to use the plug with matching socket.
- Please use this product according to the operating manual; Please do not use this product outdoor;
- This appliance is not intend to provide to person with body disabilities, senses and nerve defect or lack of common sense and life experience to(including children) use. Unless they get those who is responsible for the safety of their personnel on how to use the appliance under supervision and guidance.Children must be supervised, to ensure that they don't get to play instruments.
- If the power cord were damaged, in order to avoid danger, must be changed by professional personnel of the manufacturer, from the maintenance department or from the similar functiona1 departments.

Safety

- Please check the voltage meets the specifications ofthe products;
- Do not use wet hands to remove the power plug;
- Never use a damp cloth to clean this machine' s power switch, plugs,etc. the charged parts;
- If you feel that this appliance is abnormal in the process ofusing, please stop using it immediately and contact your dealer for advice.

The people unsuitable for use

- Osteoporosis Patients;
- With heart problems, and those who wear electronic medical devices such as pacemakers;
- Pregnant or menstruating women;
- Physical trauma orbody surface injured sufferers;
- Heat allergy person;
- As the doctor ordered who need to take rest or feel not well;


Working Environment

- Please do not use it in a highly humid environment such as to use the products in the bathroom.
- Do not use this product in the environment of sharply changing temperature

Safety and Maintenance

- This product can only be repaired by the service center which is manufacturer designated, users must not disassemble and repair.
- Please turn off the power switch after usage.
- Rolling up the appliance power cord if not in use for along time, and storage in a dry and clean environment.
- Do not store in high temperature or near the fire, do not under direct sunlight for a long time.
- Please use dry cloth to do the cleaning, do not use thinner, benzene or alcohol on equipment.
- Please use it intermittently, don't let the product do a long-time work and it should be kept continuous operation.

The key of remote

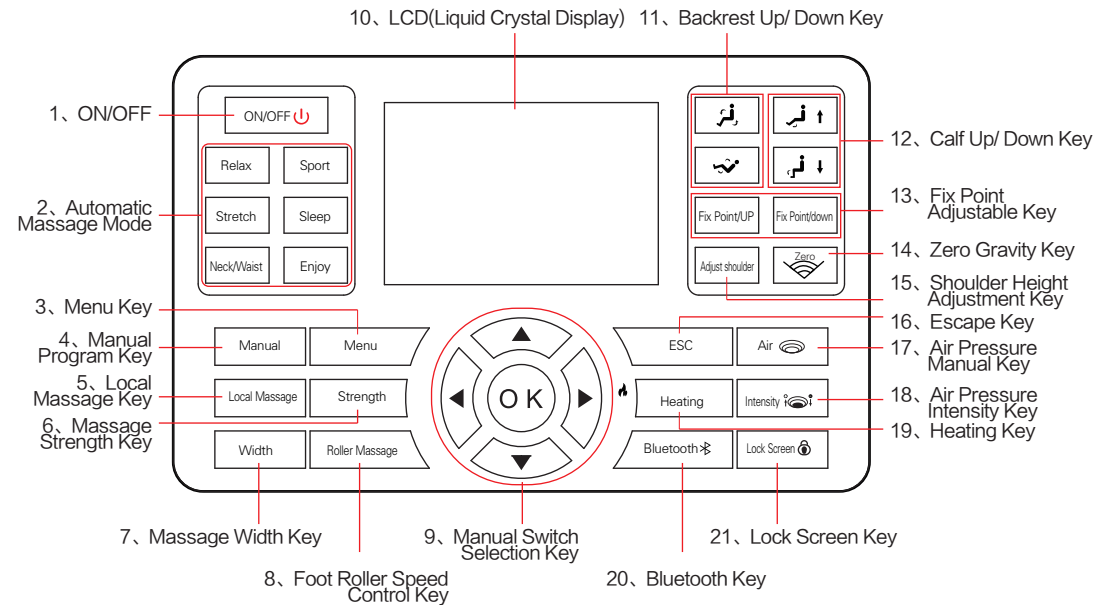


1. Switch: Turn on/off massage chair, automatic mode is entered by default when starting up.
2. Mode: manual selection and six automatic modes are available.
3. Menu: the key of Toggle between the menu screen and the main display screen.
4. Manual Program: Switching of seven massage techniques can be started up manually.
5. Local Massage: Shoulder/Back/Waist/buttocks massage can be choose manually.
6. Massage Strength: Increase or decrease the strength of full-body massage.
7. Massage Width: Manual adjust the massage wide/medium/narrow of the massage chair robot.
8. Foot Roller: open manually, Press the first time, the speed is lowest. Press the second time, the speed is medium. Press the third time, the speed is highest and press the fourth time the foot roller massage turn off.

Carrying the massage chair

Make the massage chair backward lean about 45°, using the casters to go forward or back.


Notice!

- Don't move the massage when somebody sit on it.
- The floor maybe be damaged during moving massage chair, so you'd better put something like cushion under it.
- The massage chair should be grip firmly to avoid dropping.

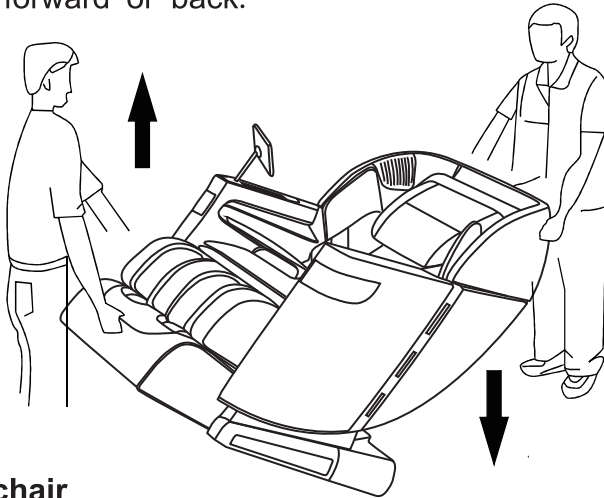

Placing the massage chair

Please leave enough space when placing the massage chair, so that the foot and back can move up and down freely. You can see the suitable space on the picture.

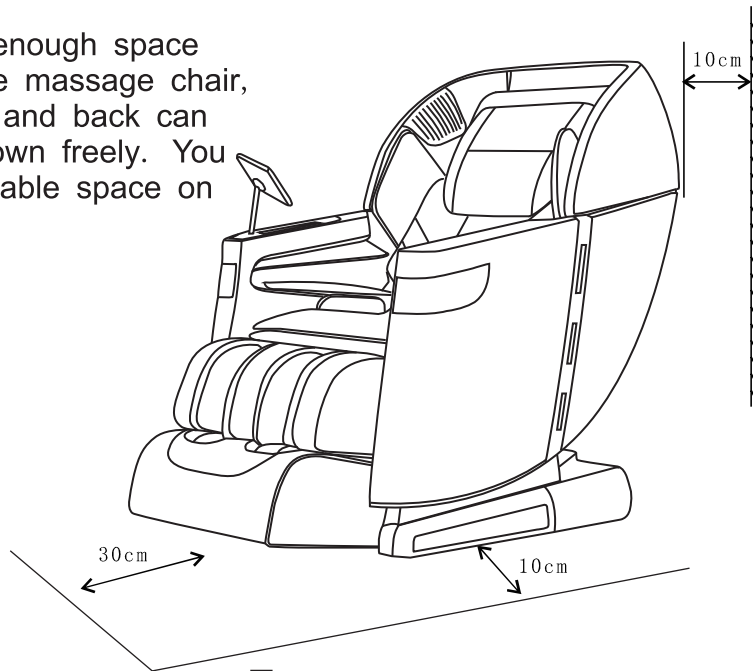

Function


- “SL” type guide rail which can massage head, neck, shoulder, back, waist and hip.
- Back with four-wheel massage mechanism hands.
- Seven massage simulation: Shiatsu, kneading, flapping, knocking, kneading and flapping, kneading and knocking, extrusion.
- Six automatic massage model: relive, sleep, vigour, pulling muscles and bones, neck and waist, Experience.
- Airbag pressure for shoulder, butt, arm, calf and foot.
- Heating for back.
- Half-automatic flexible function for footrest.
- Rollers massage for foot.
- Music can be played when connecting the built-in bluetooth.
- Link password 8888

Efficacy


- Eliminate fatigue.
- Promote blood circulation.
- Relieve muscle fatigue.
- Relieve muscle pain.

Chair Components

Chair Installing

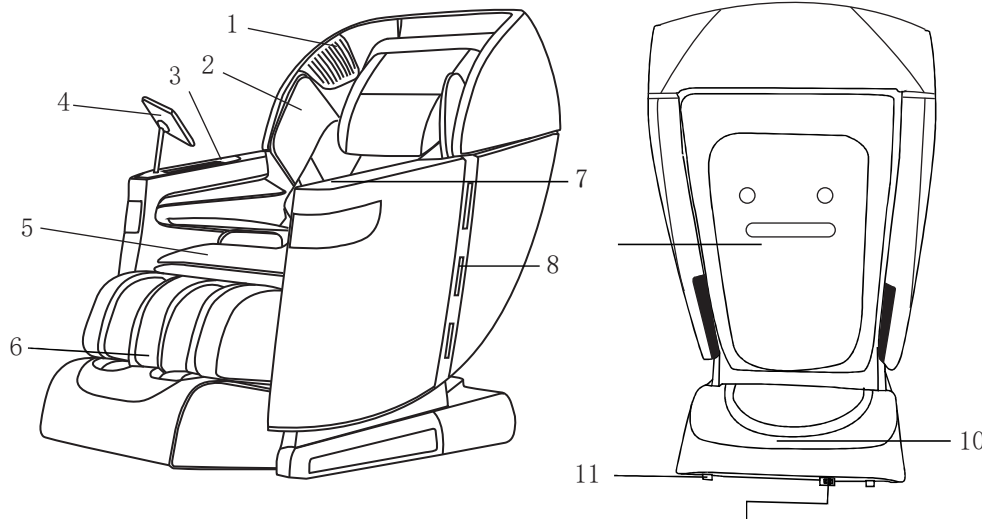


- 1、Bluetooth Speaker
- 2、Shoulder Airbag
- 3、USB Charging
- 4、Flat control Panel
- 5、Seat Cushion
- 6、Calfrest and Footrest
- 7、Armrest
- 8、LED Light
- 9、Back Cover
- 10、Mainboard Cover
- 11、Casters
- 12、Power Jack
- 13、Fuse
- 14、Power switch

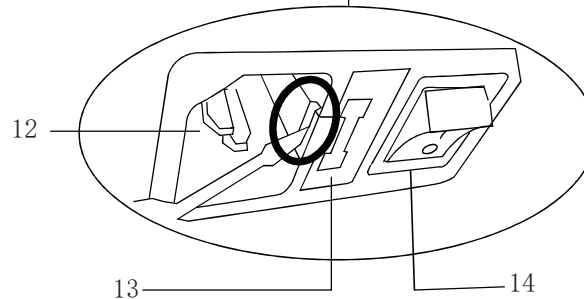

Notice: Please pry off the part which marked by a circle on the picture and then take off the fuse when change the fuse.


Switch on the power

Find the electrical socket and plug in the line, turn the switch to “I”, if the indicator lights up it means the power is connected.

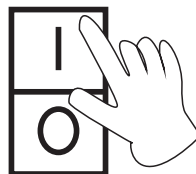


Install and dismount for armrest


When the door is too small for the chair to move into the door, pls remove the armrests and carry them separately

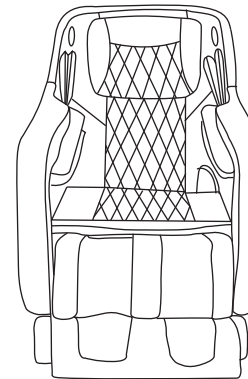

- 1.Unscrewed the inner hexagonal screw
- 2.Pull off the Speaker plug

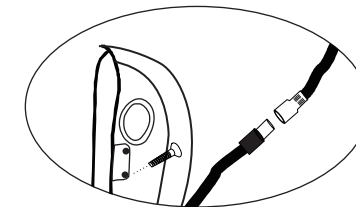

Take off the Shoulder Section

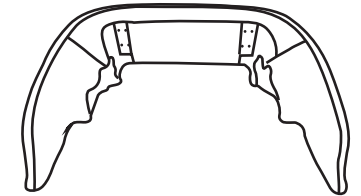 

- Connect the same color air pipe as shown in figure 1
- Put on the 2 grooves in figure 1 and 3, and the air pipe can't be crooked at that time.
- Use screw driver tighten as shown in figure 3

