
MASSAGE CHAIR

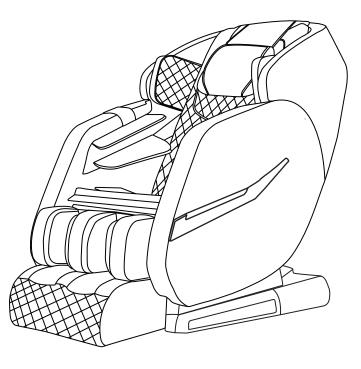

Dear user, firstly,thank you for using our massage chair.In order to offer better services,we write this instruction manual,Please read details in this pamphlet carefully and pay special attention to the important Safety instruction to ensure use it properly. Please properly keep this brochure for your consultation.

All information presented is as accurate as possible but subject to change withour notice, please check with the product, our company reservist the right to final explantion.

Content

Safety and maintenance instruction	1-2
Safety and maintenance matters	3
Function and efficacy	4
Names of parts and functions	5
Distribution diagram of control panel	6
Safety and maintenance matters	8
convention all problem processing	9

- 1. Unablto operate : please check the machine insert the plug The power switch is open? Power fuse damaged?
- 2. Massage stopped suddenly, maybe this time has come regularl or accidentally pressed the on/off key on the control panel
- 3. When machine running have motor noise, belongs to the normal operation of the sound.
- 4. When the machine run to stop, it means one program time have finished, please press the control panel key to operate.

Shut off the power and stop massage

During massaging, press the on-off key, all the massage function to be closed immediately, and massage chair reset automatically,Massage timing reached time preset, all the massage function also will be closed immediately, but the backrest of the chair and leg lifter and seat do not automatic reset but keep in the original shape and state.

Product Specification

Product Name: Massage Chair Rated Voltage: 220V-240V~ Rated frequency : 50/60Hz Rated Power: 60W Working Time: 20Minutes Execution Standard: GB4706.10-2008 Security Standard: Class I

Product Maintenance

- 1. This product can only be repaired by the service center which is manufacturer designated, users must not disassemble and repair.
- 2. Please turn off the power switch after usage.
- 3. Rolling up the appliance power cord if not in use for a long time, and storage in a dry and clean environment.
- 4. Do not store in high temperature or near the fire, do not under direct sunlight for a long time.
- 5. Please use dry cloth to do the cleaning, do not use thinner, benzene or alcohol on equipment,
- 6. Please use it intermittently, should not let this product work long-term and keep continuous operation.

Common Phenomenon Processing

- 1. Massage chair do not work after plugged in, checking the power plug whether inserted and energized or not
- 2. A click sound during operation, belong to the normal sound of working operation;
- 3. The instrument stops operation, please press key to operate again after the work time Method of use


Warning!

- 1.Do not use this machine with off-standard voltage.
- 2. Make sure to use the plug with matching socket.
- 3. Please use this product according to the operating manual
- 4. Please do not use this product outdoor.
- 5. This appliance is not intend to provide to person with body disabilities, senses and nerve defect or lack of common sense and life experience to (including children) use. Unless they get those, Who is responsible for the safety of their personnel on how to use the appliance under super vision and guidance?
- 6. Children must be supervised to ensure that they do not get to play instrument
- 7. If the power cord were damaged, in order to avoid danger, must be changed by professional personnel of the manufacturer from the maintenance department of the similar functional departments.
- 8. This equipment with hot surface, the person who is not sensitive to heat must pay attention to use.

Operational Environment


- 1. Please do not use it in a highly humid environment such as to use the products in the bathroom
- 2. Do not use this product in the environment of sharply changing temperature.

3. Finding a location for the chair

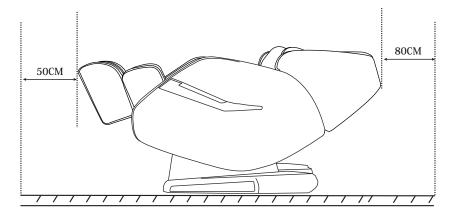

4. Moving the massage chair

 Press down the back of massage chair to approximately angle 45° degree.
This will make it to easily be moved to another location.

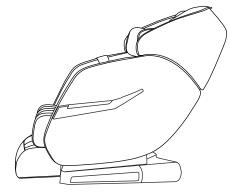

CAUTION:

- * Do not move massage chair when it is occupied or in use.
- * Moving the massage chair may cause damage to floors. Floor protection is recommended.
- * Do not drop or suddenly let go of the chair while moving it.
- * At least two people to move the chair is recommended. The first person should lift up the legrest, while the second person holds the backrest.

1. Open key: turn on/off the massage chair. When it is turned on, it will enter the automatic mode by default.

2. Mode key: automatic mode switching key, press this key to switch between four automatic modes.

3. Neck : Manually open/close, neck massage function.

4. Back : manually open/close, back massage function.

5. Fixed point key: manual open/close, fixed-point massage function.

6. Neck lift button: In manual mode, press and hold the "Neck/Up" massage part to move upward, release the button to fix the massage at the current position. In manual mode, press and hold the "Neck/Down" massage part to move upward, release the button to fix the massage at the current position.

7. Massage intensity key: In manual mode, there are three levels of body massage intensity that can be adjusted by strengthening or reducing the massage.

8. Upper back/lower back button: Press the button "Upper Back " to knead and beat the upper back part of the kneading hammer movement. Press the button "lower back button" to knead and beat the waist.

9. Zero gravity key: The massage chair will automatically adjust to zero gravity when it is turned on. The posture of the massage chair is restored to the initial state when it is turned off. Zero gravity adjustment Press and hold the " 🛫 " button to lower the backrest; press the " 🚅 " button to raise the backrest.


10. Heating button: manual on/off, waist heating function.

11. Foot roller button: Manually turn on/off, foot roller massage function.

12. Airbag strength key: Manually adjust the airbag strength, three-level strength adjustment, and cycle operation in turn

13. Local airbag button: Manually adjust the local airbag massage, such as shoulders, arms, legs, and feet.

- 2 -

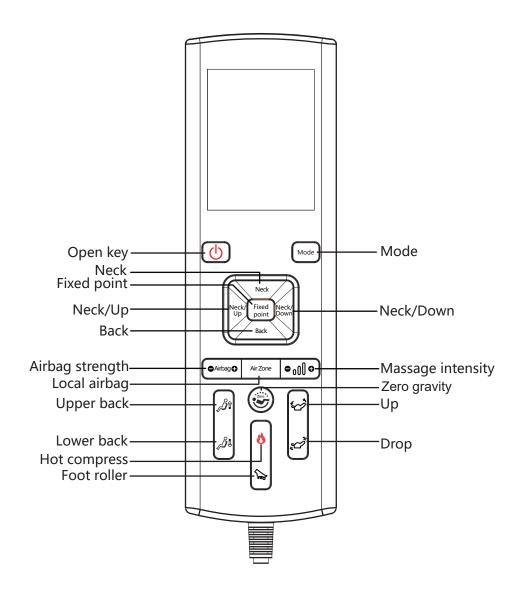

The pepople unfit use

- 1. Osteoporosis Patients.
- 2. With heart problems, and those who wear electronic medical devices such as pacemakers.
- 3. Pregnant or menstruating women.
- 4. Physical trauma or body surface injured sufferers.
- 5. Heat allergy preson.
- 6. As the doctor ordered need to rest or those who feel unwell.

Security matters

Please check the voltage meets the specifications of the products.
Do not use wet hands to remove the power plug.

- 3. Never use a damp cloth to clean this machine' s power switch, plugs,etc.the charged parts.
- 4. If you feel that this appliance is abnormal in the process of using, please stop using it immed iately and contact your dealer for advice.

Functions

- 1. Four wheels driven, a group walks up and down on backrest, static sound effect designed massage manipulator.
- 2. There are 5 types of simulation massage technique including Shiatsu, Kneading, Flapping, Knocking, Kneading and knocking synchronous.
- 3. There are Leisure, Upper Body Automation, Stretching and sleeping four sets of automatic massage modes.
- 4. Air pressure massage function for arms, hips, calves and feet
- 5. Heating function for Backrest and Buttocks.

Efficacy

- 1. Eliminate fatigue;
- 2. Promote blood circulation;
- 3. Relieve muscle fatigue;
- 4. Relieve muscle pain.

