

39. Tighten the seat screws



41. Through screws, secure gasket



43. Place the rear seat



45. Fasten the four screws and nuts



47. Pedal strap "L" with an "R" on the left side of the bike The letters are on the right side of the bike (pedals are on a black iron flat surface Marked with "L" and "R")



 Place the back basket with the bend facing back



42. Tighten gasket, screws and nuts



 Pull up seat plate and put on screw spacers



46. Pull up seat plate to place items



48. Introduce the thread by hand and rotate the left and right pedals towards the front

Manual tricycle installation instructions






 Tighten the quick-release screws to secure the handle



Portable quick open, share the folding machine

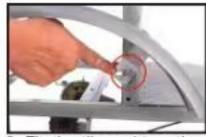

3. Fix the tile and turn the long hole to the end



Place the bead rack with bottom plane facing down




Place the bottom iron plate in the slot



21. Hang brake cable and tighten front aluminum cap



27. Adjust brake properly and fix the nut

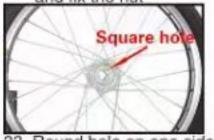

33. Round hole on one side, 34. Round holes face inward square hole on the other square holes face outward square slot of rear axle



4. Secure the screws



10. Top bead frame plane upward



16. Secure iron sheet with two screws



22. Secure brake handle with a wrench



28. Load bearing





5. Tighten rear tile taillights



11. Tighten flat cover wire



17. Loosen the heart into the front fork



23. Knead front brake into position



the bearing







12. Install light fork in groove 13. Tighten the top screws



18. Install screws in place



24. Tighten brake cable and fix the screw



30. Fasten the gasket



36. Install seat tube



6. Unscrew front fork parts 7. Install front fork steel bowl





19. Tighten the brake cable and loosen the front



Adjust brake to tightest position after pinching



31. Fasten the nut, don't press it too tightly



37. Adjust the height and tighten quick disassembly



Press deep steel bowl below, shallow bowl above




14. Install front basket



20. Thread brake wire into brake handle along groove



26. Pull the brake wire through the hollow nut

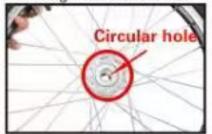

32. The other wheel has no bearing

