



COMPLET

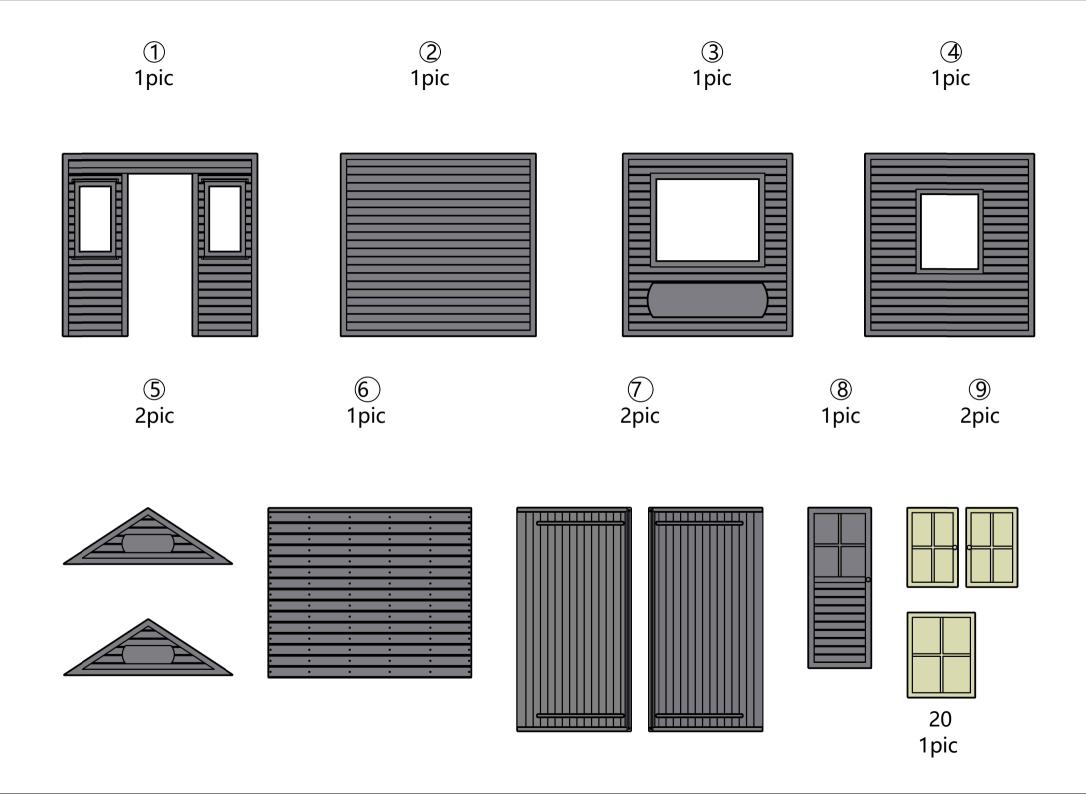


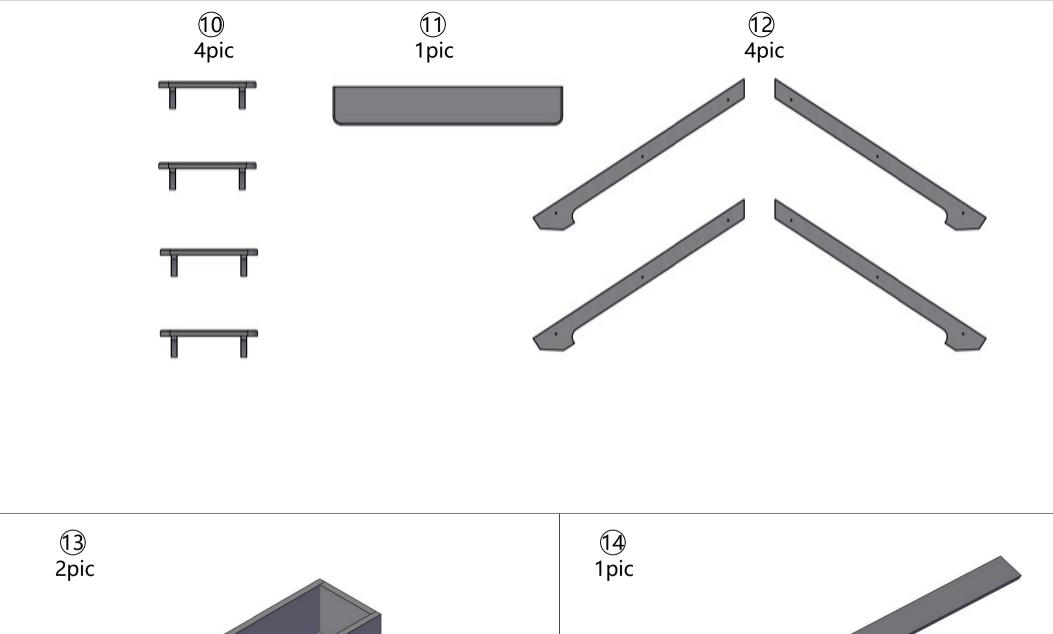

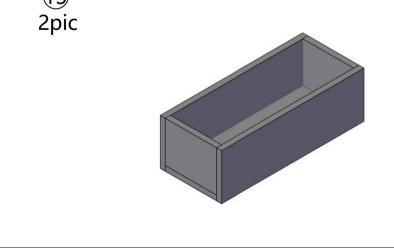

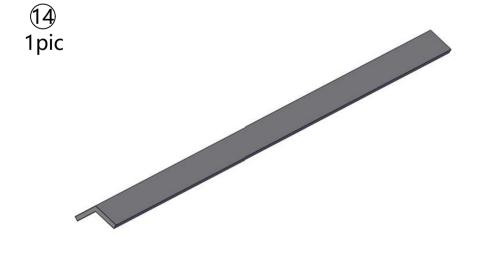





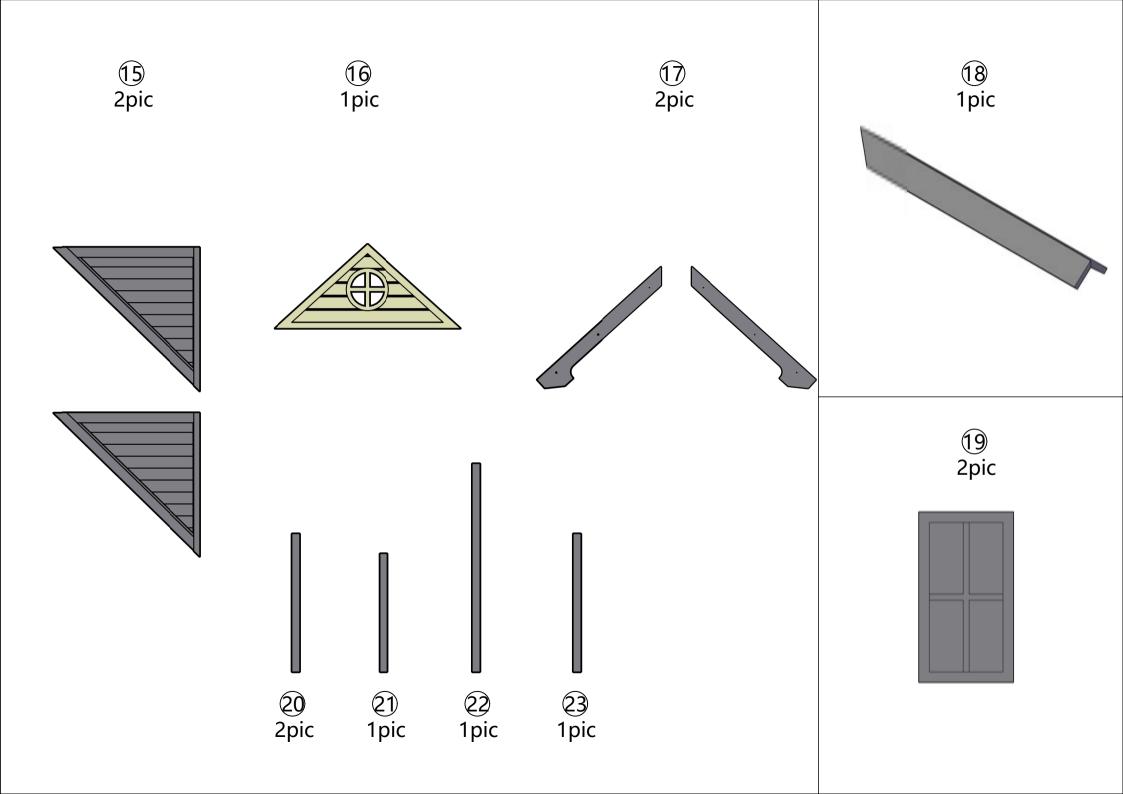


M4*20 80pic M4*35 10pic M3*18 M4*50 80pic 50pic P1 12pic P5 P2 5pic 12pic

Use M4*35install P2

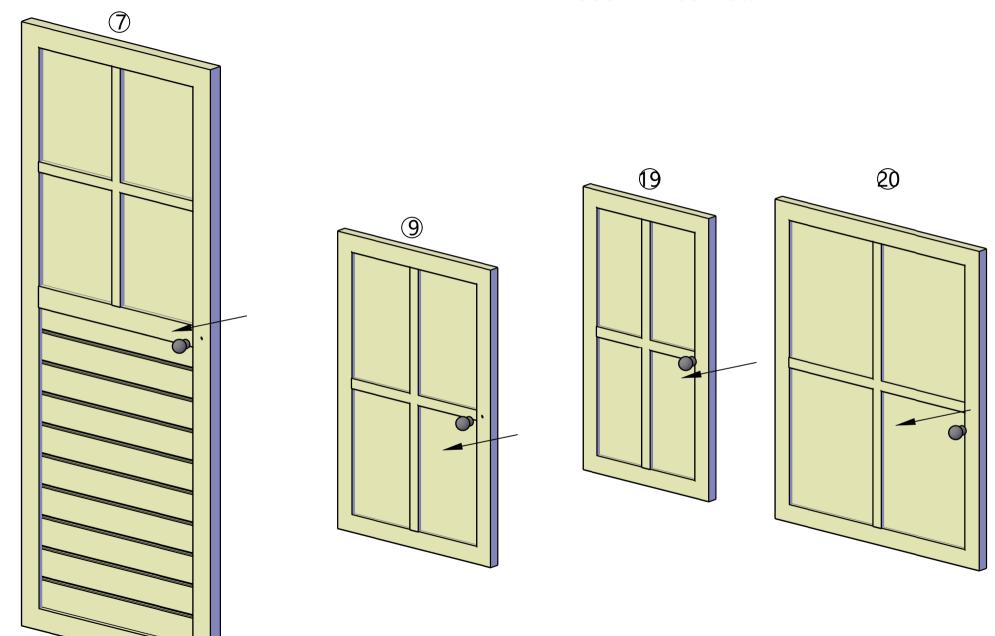

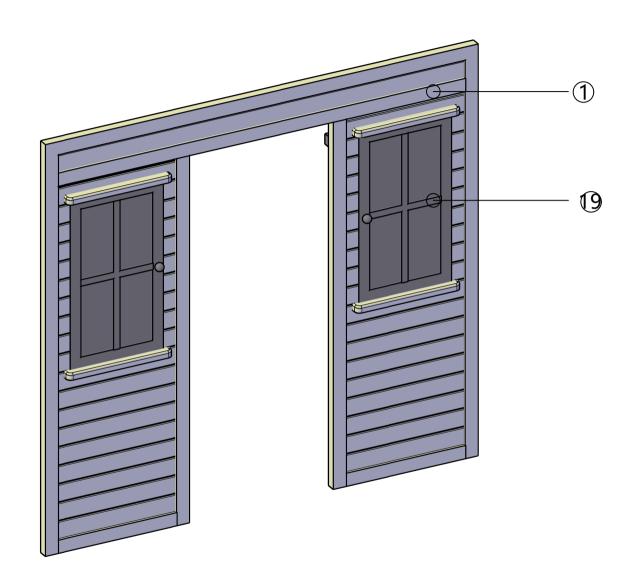

Use M4*20 to install component 13 below the window of part 1. Insert the screws from the back of the wall panel.

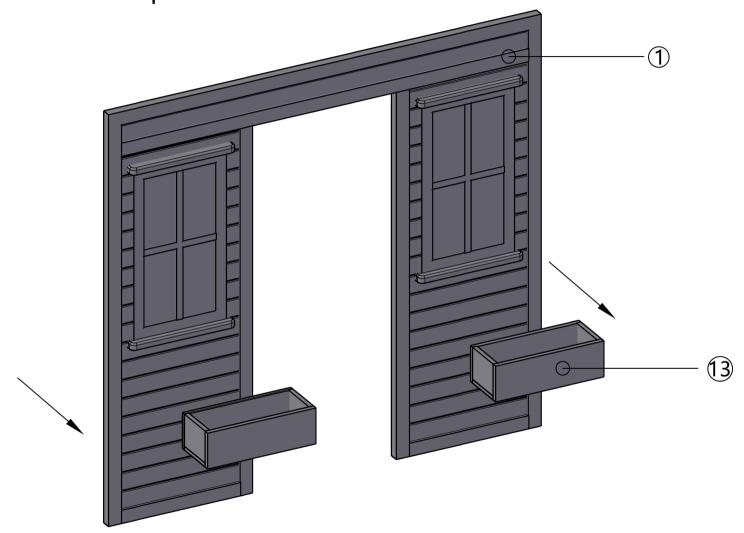


Lay the front wall panel flat on the ground. Install component 8 at a centered and appropriate position using P4 magnetic touch, P5 one-inch hinge, and M3-18.







Install wooden pieces with magnetic touch above the front wall door frame and windows.

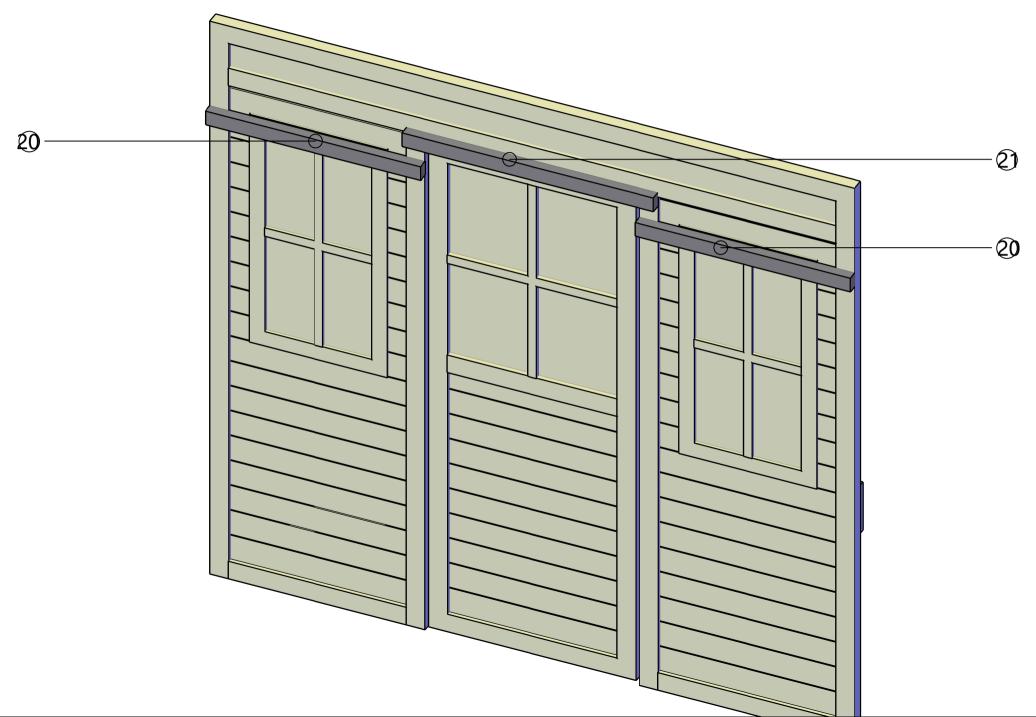


Use M4*20 to install screw No. 10 in the appropriate position on component No. 2, inserting it from the back.

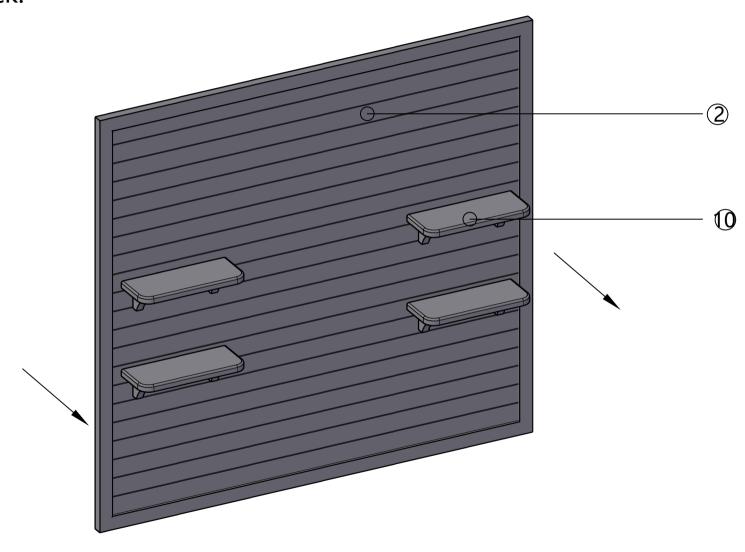


Secure No. 11 onto No. 3 using M4*35.

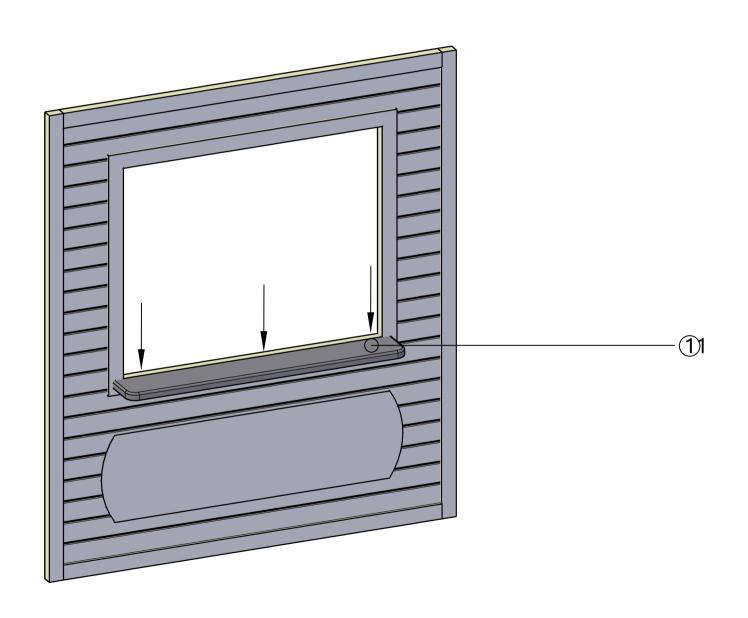


Secure No. 9 onto No. 3 using M435. Use P5 hinge, P4 magnetic touch, and M3*18.

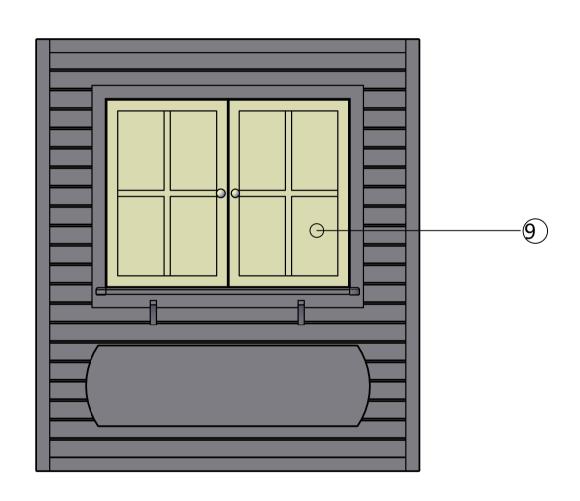


Install wooden pieces with magnetic touch on the back of the wall.

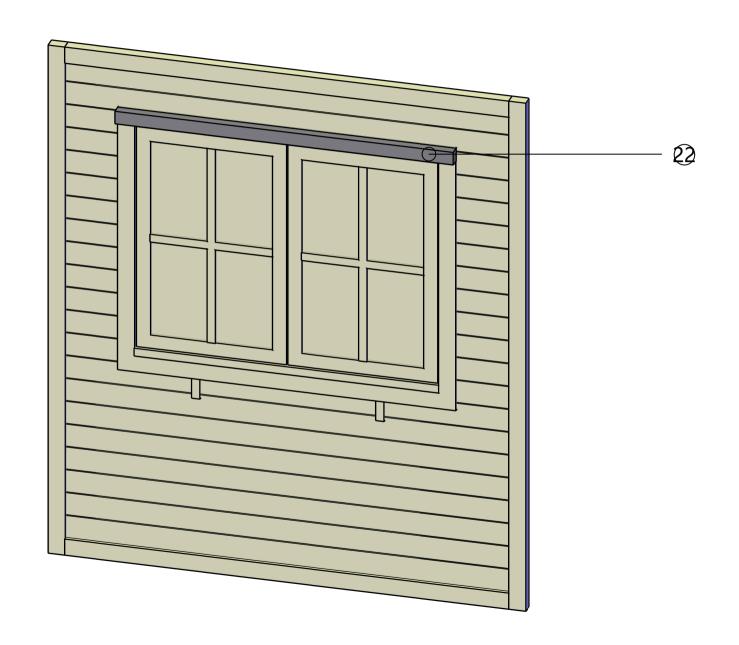


Use M4*50, locating pin, to secure and fix the wall panel.

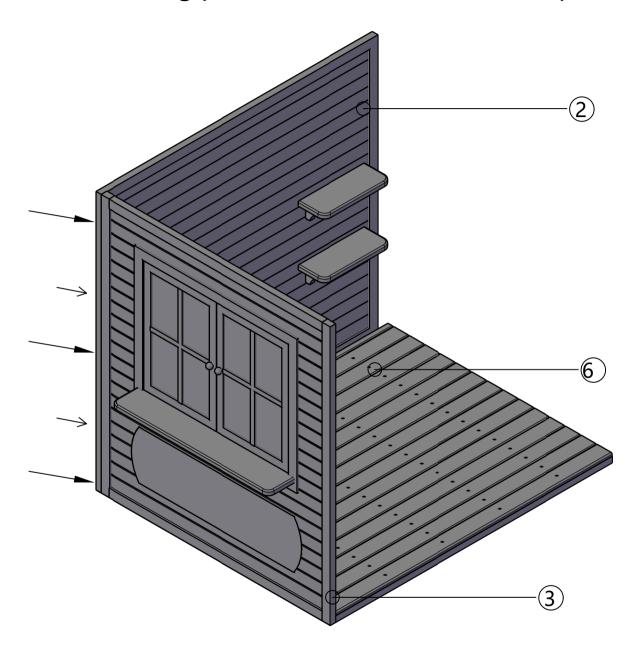


Use M4*50, P1 locating pin, to secure and fix the wall panel.

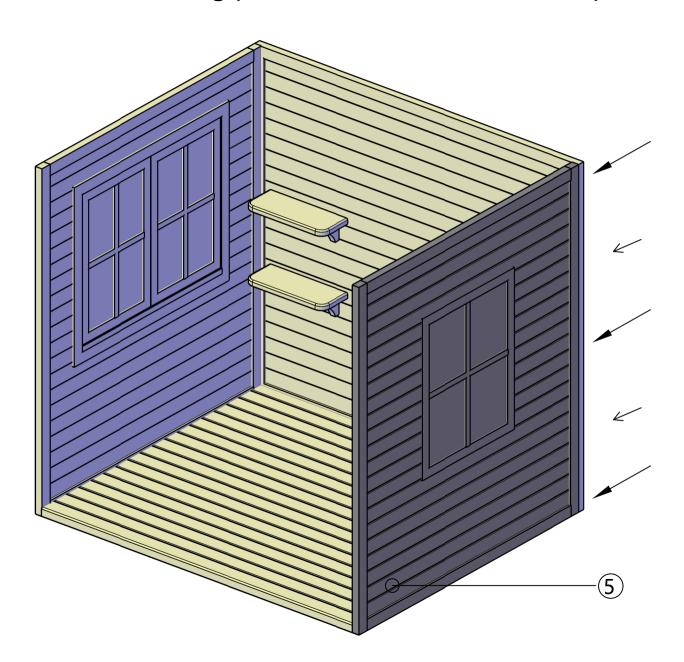


Use M4*50, P1 locating pin, to secure and fix the wall panel.

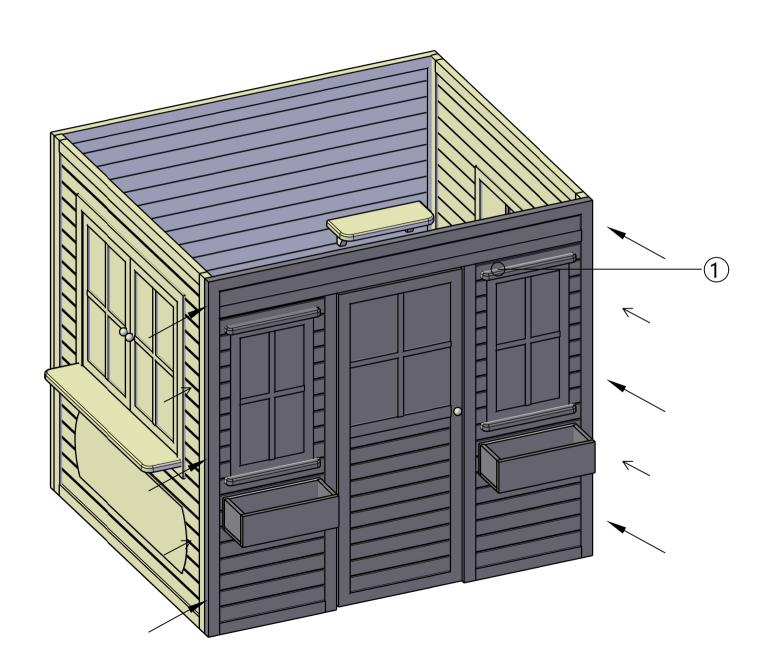


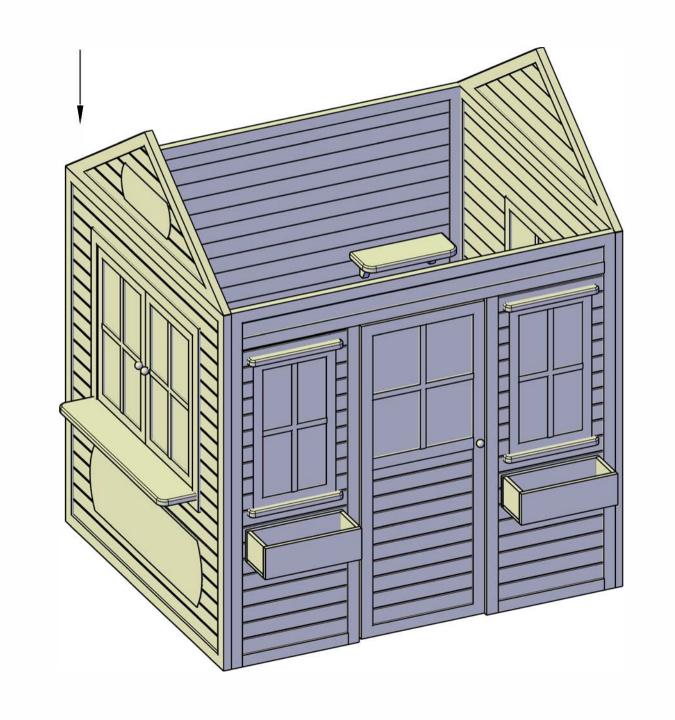


Use M4*50 screws from the wooden block at the bottom of the wall to tightly secure the wall and the floor as one unit.

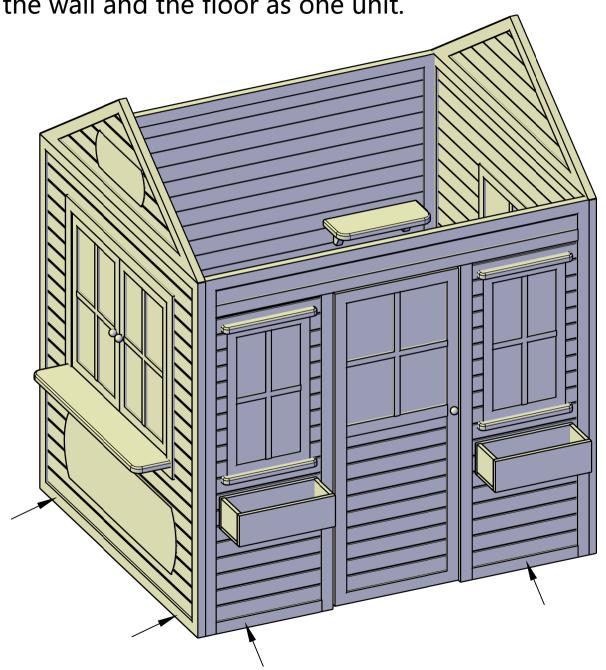


Secure No. 7 using M4*50.

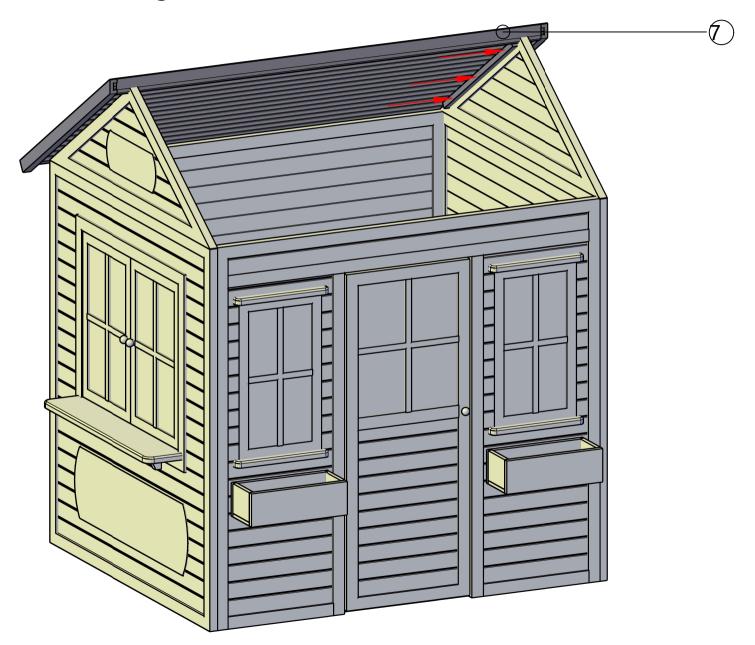


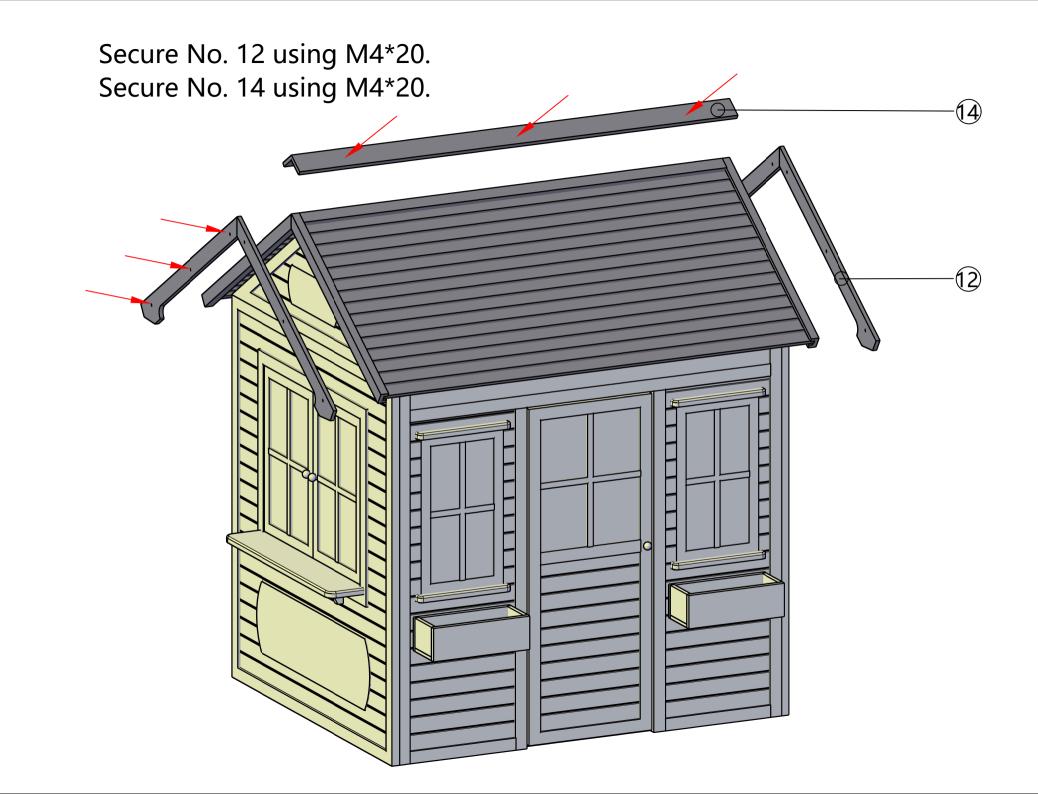

Secure No. 16 using M4*20

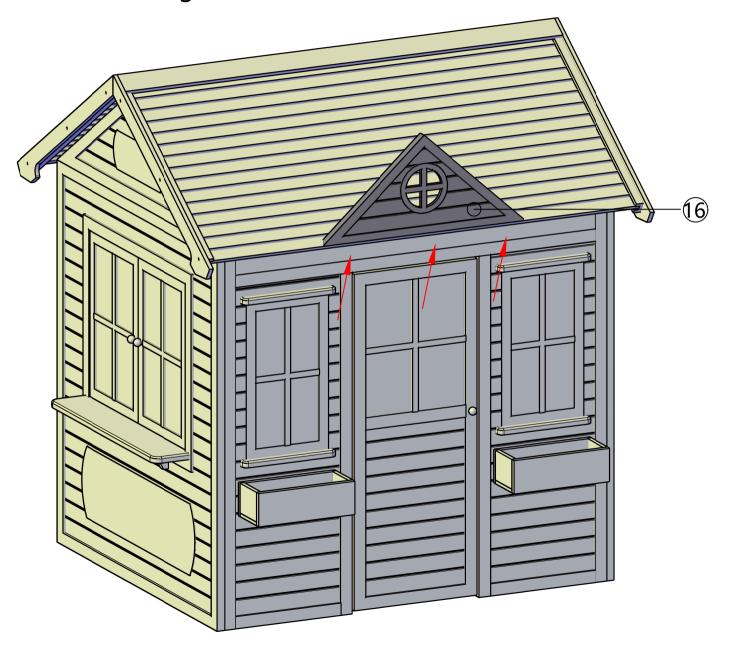

Secure No. 15 using M4*50

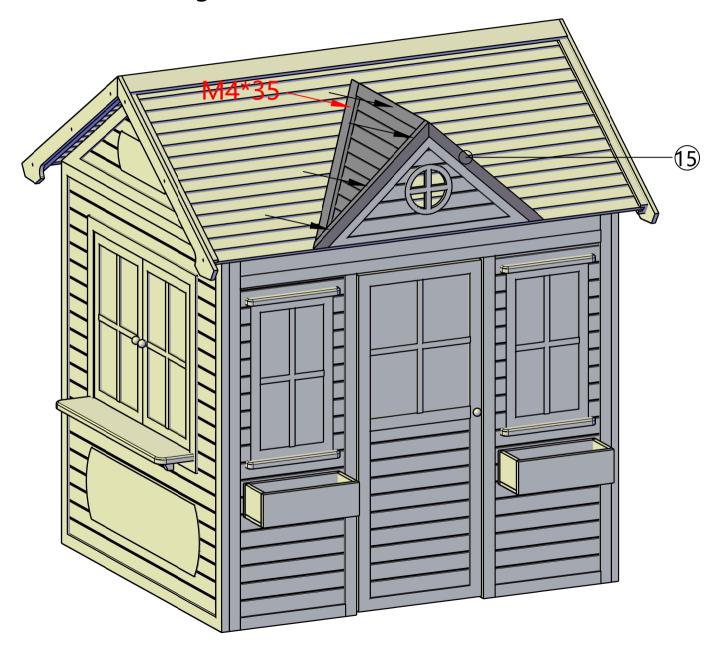

Secure No. 17 and No. 18 using M4*20.

