


Specifications

Name	Massage Chair
Model	S9
Rated Voltage	220V~50Hz
Rated Power	100W
Security Standard	Class I
Rated time	20minutes

Massage Chair

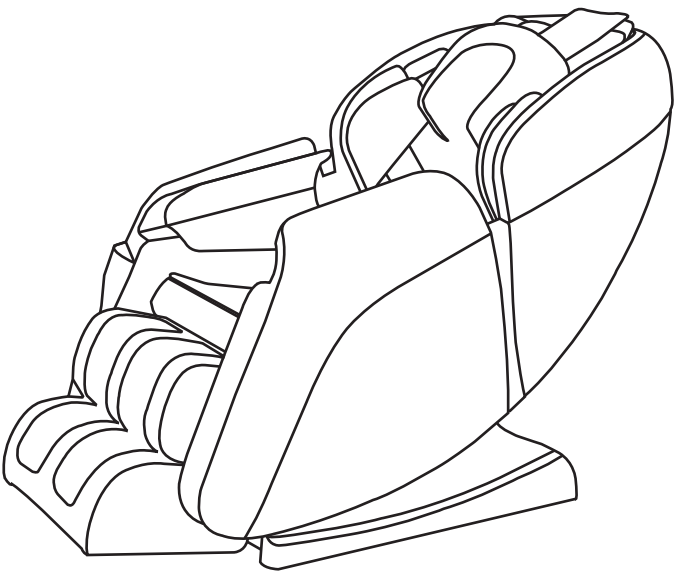

Thank you for purchasing Massage Chair. Before using your massage chair, please read the contents of this instruction manual and refer to it when needed.

Content

Safety and Maintenance.....	2
Function and Efficacy.....	4
Chair Components	5
Chair installing.....	6
Operation Guide	8
Troubleshooting & Notice	10

Troubleshooting

- When plugging in the socket, the massage chair doesn't work, please check if the socket is well or if the power is on.
- When the power is on, the massage chair doesn't work, please change the fuse, and you can find how to change it on page 5 of this instructions.
- The massage chair suddenly stops work, maybe the time is out, or maybe you pressed the "turn off" carelessly.
- There is noise of motor when the massage working, and this is normal phenomenon.
- When time is out and the massage chair stops working, press the key and it will work again.
- When the indicate light flashing but the massage chair can't be turned on, please check if all the key is good, or if the the connector of the remote line is OK.
- When there is something wrong happens while massage, please shut off the power and then turn on again.

Notice

- Please consult this brochure when meeting problems during using the massage chair. If the problem is difficult to resolve, please shut off the power, take out the socket and contact your dealer or manufacturer for advice.
- Please don't dismount or maintenance the massage chair. The guarantee will be invalid if the massage chair damaged because of dismounting or maintenance by yourself.

Power on massage

Standby key: Press the "⏻" key to turn on/off the massage function of the whole machine.

When the power is turned on, press this button to lie down to the initial angle. After completion, the first automatic program "Relax Massage" will run by default. The default working time is 15 minutes. Press this button again and wait for another 20 seconds. Turn off all functions of the massage chair.

Automatic mode

Automatic massage program key: According to your body condition and massage time, you can choose "Kneading Mode", "Shiatsu Mode", "Strength Mode", "Muscle Relax Mode" and "Sleeping Mode", any of the five massage program for targeted massage. (See the LCD screen description for details)

Airbag massage

Automatic air pressure: Press the "Auto Air Massage" key to turn on or off the air pressure.

Shoulder head airbag: Press the "Shoulder/Head Air Massage" button to open or close the shoulder airbag.

Seat cushion arm airbag: Press "Seat/Arms air Massage" to turn on or off the seat cushion and arm airbag.

Leg airbag: Press the "Leg Air Massage" button to turn on or off the leg airbag.

Air pressure adjustment: Press the "Air Intensity" key to adjust the airbag strength (1-3).

Manual mode

Manual setting: Press the "Manual" key to select 3 massage methods.

Massage speed adjustment: press "Speed +" key to increase massage speed, press "Speed -" key to decrease massage speed

Other

Heating: Press the "Heat" button to turn on/off the heating of the waist kidney lamp.

Foot roller: Press the "Foot Roller" key to turn on/off the foot roller.

Buttocks roller: Press the "Buttocks roller" key to Turn on/off the buttocks massage function.

Time: Press the "Timing" button to choose 15 /20 /25 /30 mins timed massage.

Zero gravity: Press the "Zero Gravity" key to turn on/off zero gravity, long press the "UP" key to raise the backrest, and long press the "Down" key to lower the backrest.

Warning

- Do not use this machine with unsuitable standard voltage.
- Be sure to use the plug with matching socket.
- Please use this product according to the operating manual; Please do not use this product outdoor;
- This appliance is not intend to provide to person with body disabilities, senses and nerve defect or lack of common sense and life experience to(including children) use. Unless they get those who is responsible for the safety of their personnel on how to use the appliance under supervision and guidance.Children must be supervised, to ensure that they don't get to play instruments.
- If the power cord were damaged, in order to avoid danger, must be changed by professional personnel of the manufacturer, from the maintenance department or from the similar functiona1 departments.

Safety

- Please check the voltage meets the specifications ofthe products;
- Do not use wet hands to remove the power plug;
- Never use a damp cloth to clean this machine' s power switch, plugs,etc. the charged parts;
- If you feel that this appliance is abnormal in the process ofusing, please stop using it immediately and contact your dealer for advice.

The people unsuitable for use

- Osteoporosis Patients;
- With heart problems, and those who wear electronic medical devices such as pacemakers;
- Pregnant or menstruating women;
- Physical trauma orbody surface injured sufferers;
- The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.
- As the doctor ordered who need to take rest or feel not well;


Working Environment

- Please do not use it in a highly humid environment such as to use the products in the bathroom.
- Do not use this product in the environment of sharply changing temperature

Safety and Maintenance


- This product can only be repaired by the service center which is manufacturer designated, users must not disassemble and repair.
- Please turn off the power switch after usage.
- Rolling up the appliance power cord if not in use for along time, and storage in a dry and clean environment.
- Do not store in high temperature or near the fire, do not under direct sunlight for a long time.
- Please use dry cloth to do the cleaning, do not use thinner, benzene or alcohol on equipment.
- Please use it intermittently, don't let the product do a long-time work and it should be kept continuous operation.

The key of remote

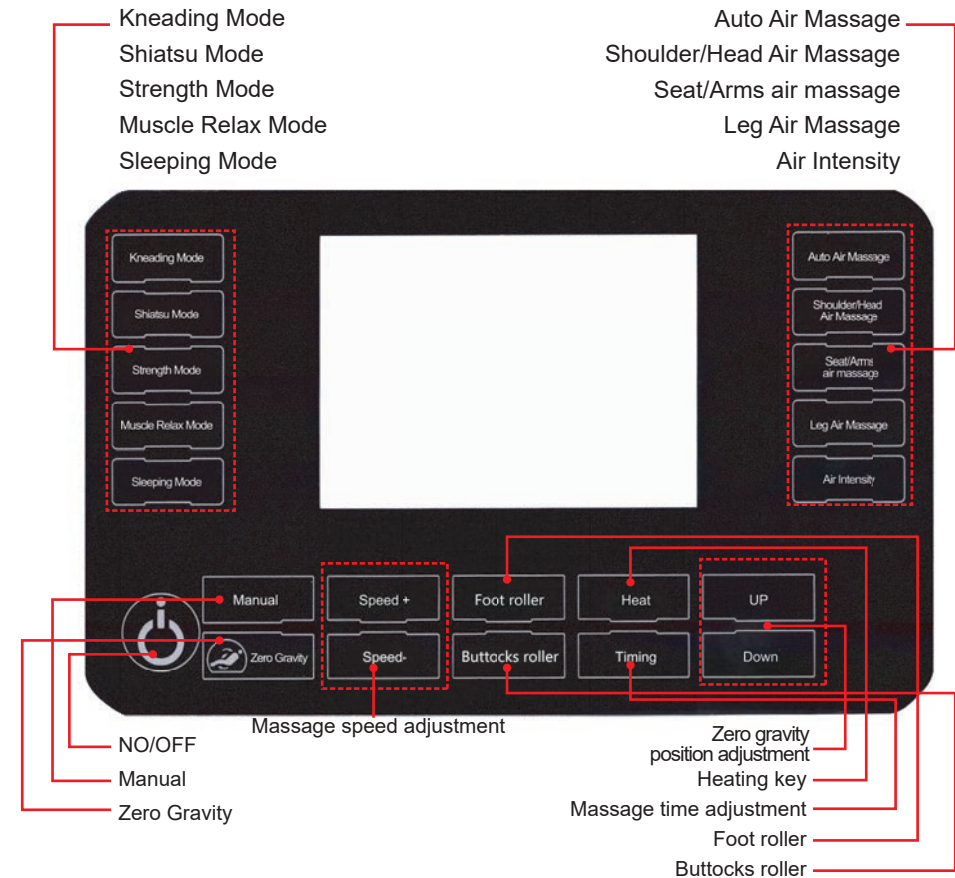

Switch on the power

Find the electrical socket refer to page 5 and plug in the line, turn the switch to “1”, if the indicator lights up it means the power is connected.

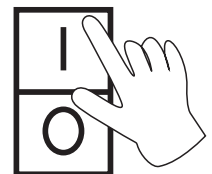


Carrying the massage chair

Make the massage chair backward lean about 45°, using the casters to go forward or back.


Notice!

- Don't move the massage when somebody sit on it.
- The floor maybe be damaged during moving massage chair, so you'd better put something like cushion under it.
- The massage chair should be grip firmly to avoid dropping.

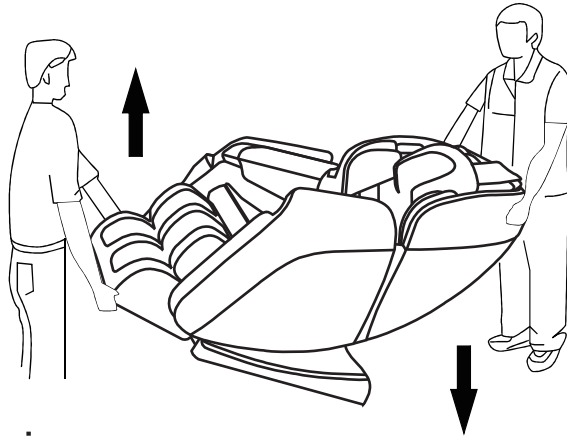

Placing the massage chair

Please leave enough space when placing the massage chair, so that the foot and back can move up and down freely. You can see the suitable space on the picture.

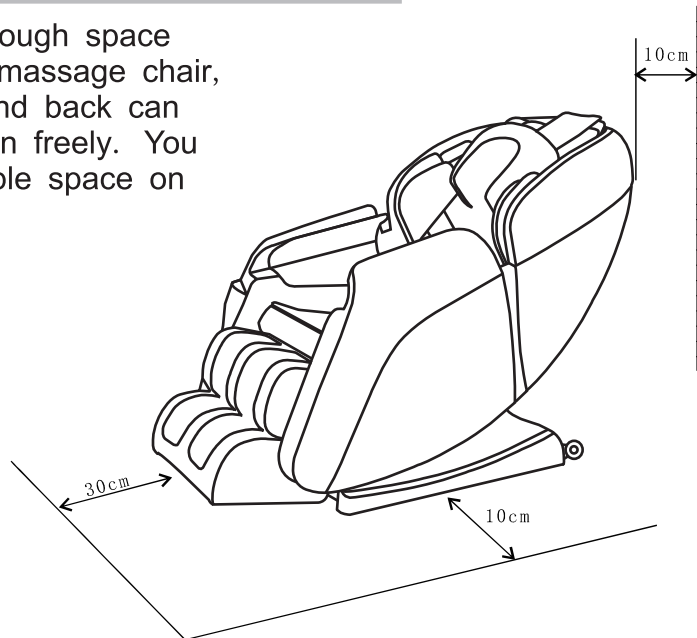


Function

- The L-shape can massage the neck, shoulders, back, waist and other parts.
- Eight push massage heads on the back
- Four automatic massage modes: Refresh, Energy, Sleep, and SPA massage modes.
- Airbag pressure on shoulders, arms, calves and feet.
- Constant temperature heating on the back.
- The semi-automatic pedal function is flexible.
- Foot roller massage.
- Connect the built-in Bluetooth to play music.

Efficacy


- Eliminate fatigue.
- Promote blood circulation.
- Relieve muscle fatigue.
- Relieve muscle pain.

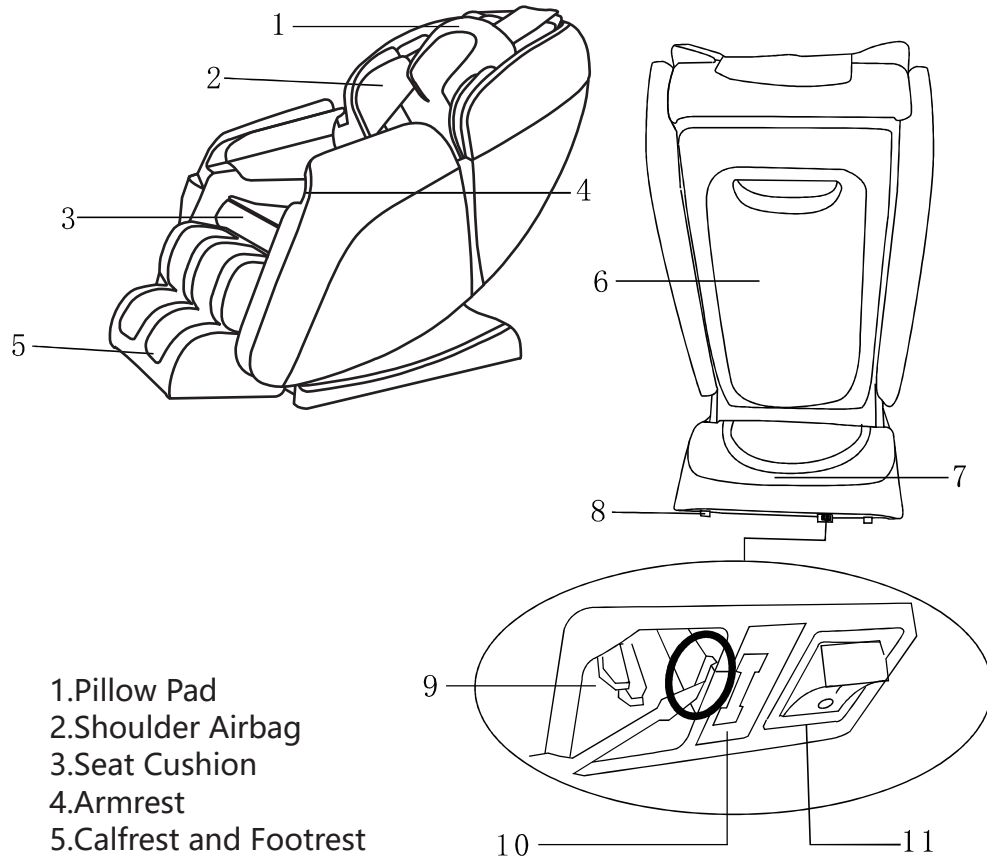


- 1. Pillow Pad
- 2. Shoulder Airbag
- 3. Seat Cushion
- 4. Armrest
- 5. Calfrest and Footrest
- 6. Back cover
- 7. Mainboard Cover
- 8. Casters
- 9. Power Jack
- 10. Fuse
- 11. Power switch

Notice: Please pry off the part which marked by a circle on the picture and then take off the fuse when change the fuse.


If door is narrow, please remove the side panel

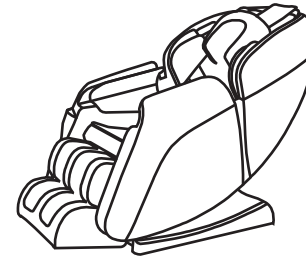

- 1. Unscrewed the inner hexagonal screw
- 2. Pull off the Speaker plug

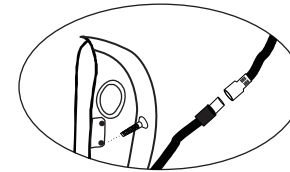


Take off the Shoulder Section

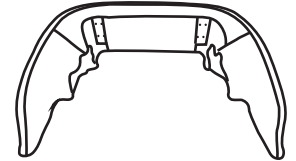


Install and dismount for armrest

When the massage chair can't be carried into the room as the door is not big enough, we can dismount the armrest and carry separately.


- Connect the same color air pipe as shown in figure 1
- Put on the 2 grooves in figure 1 and 3, and the air pipe can't be crooked at that time.
- Use screw driver tighten as shown in figure 3

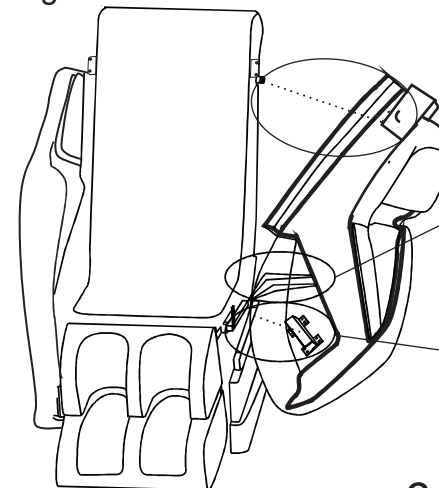

picture 1

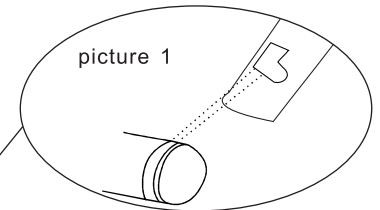

picture 2

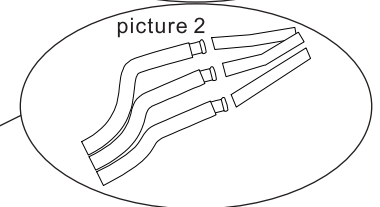

picture 3

