


# **Luxury multifunctional massage chair**

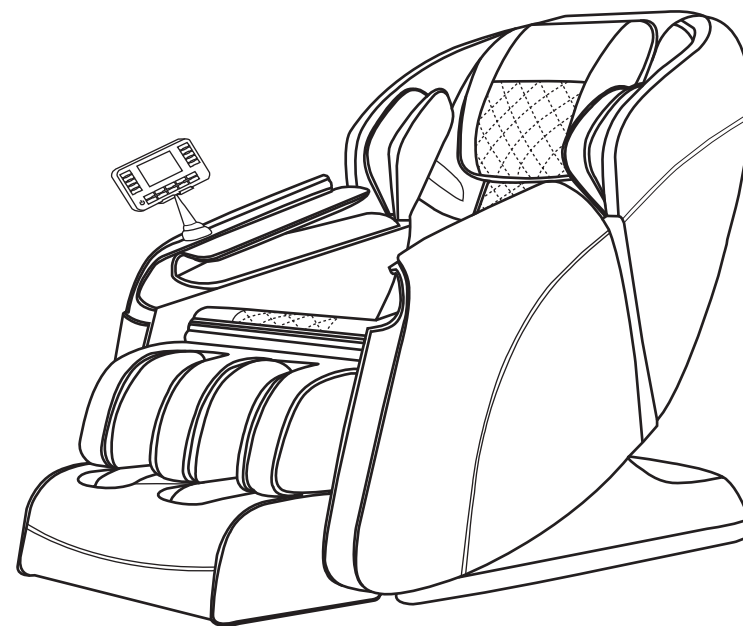

**User's manual**

Thank you for choosing this product. Before you use it, please read this instruction manual in order to master the correct use of this product. When referring to it, please pay special attention to important safety warnings. At the same time, keep the instruction manual for future reference.

Note: The company reserves the right to change and explain the design of the product. If there is any change without notice, the color of the product is subject to the actual product.


## Contents

Safety and maintenance matters.....	1-2
Use safety warning .....	3
Part Name .....	4
Product Features .....	5
Hand control introduction .....	6
Button function of hand control .....	7
Instructions .....	8-9
Product specifications .....	9

## Instructions

### 3. Moving method

After confirming that all the wires are pulled out of the massage chair, press the backrest down to a certain angle (when the center of gravity falls on the pulley), you can push the massage chair forward with your hand, and then move the massage chair to a suitable position. Back to normal angle. (Note: When moving, be sure to turn off the power switch before unplugging the power cord).

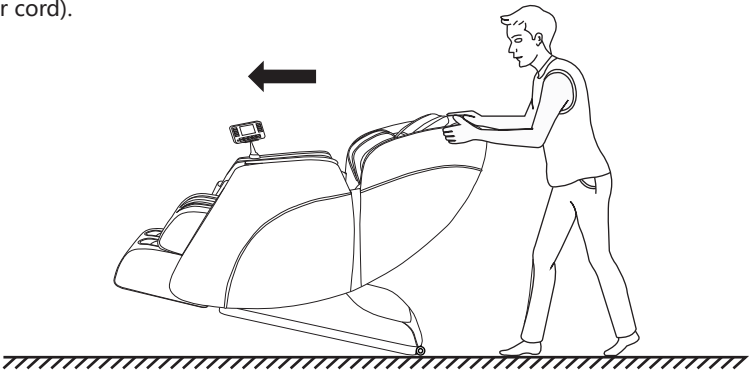

The moving pulley behind the massage chair is only suitable for short-distance and slow-speed pushing. For long-distance transportation, please use other auxiliary moving tools to move the massage chair!

## Product specifications

Product name: luxury multifunctional massage chair

Rated voltage: 220V~

Rated frequency: 50Hz

Rated power: 60W

Rated working time: 15-30min

Executive standard: GB4706.10-2008/ GB4706.1-2005

Product safety design: Class I


## Instructions

### 1. Bluetooth audio playback operation instructions


- (1) Bluetooth is turned on by default when it is turned on and voice prompts;
- (2) Turn on the Bluetooth function of the mobile phone, find that the Bluetooth connection of

### 2. Handrail disassembly



When the doorway is too small and the chair cannot be moved into the door, the armrest can be removed and transported separately.

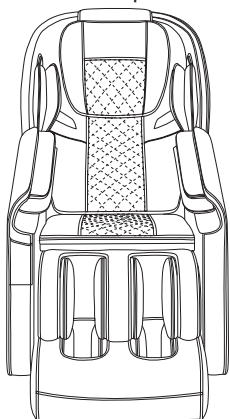

1. Unscrew the hexagon socket screws on both sides
2. Unplug the speaker connector

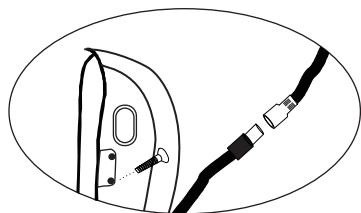

1. Connect the trachea in Figure 2 according to the color;
2. Then fit the two card slots of Figure 1 and Figure 3 together. When the two card slots are installed, the air should be managed smoothly and bend carefully;

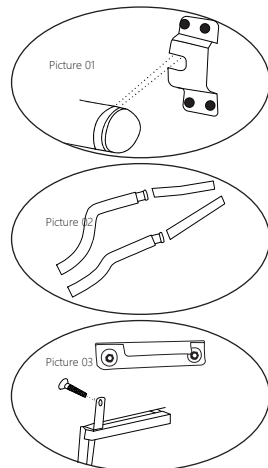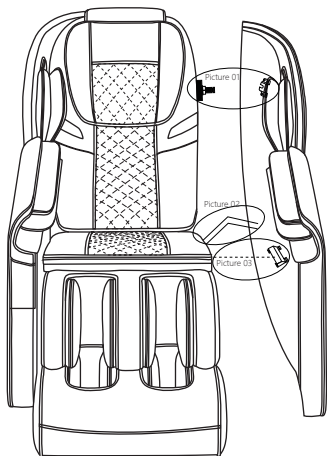

## Safety and maintenance matters

### 1. Important safety warning

- Do not allow children to approach the movable part of this appliance;
- Please use a well-grounded power source that matches this appliance;
- Please unplug the power plug after use or before cleaning, so as not to cause equipment or personal damage;
- Please use this appliance according to the instructions in this manual;
- Do not use unrecommended accessories and accessories;
- Do not use this appliance outdoors;
- Please read this operation manual carefully before starting to use;
- It is forbidden to use this appliance for other purposes not listed in this manual;
- The recommended use time is 20 minutes;
- Do not use this appliance when the cover cloth is broken or damaged;
- Do not use this appliance when the outer shell or outer cover of this appliance is damaged;
- Do not use any objects to cover the cooling holes of this appliance;
- Do not let any objects fall into this appliance;
- Do not sleep during the use of this appliance;
- Do not use this appliance when you are drunk or feel unwell;
- Do not use this appliance within one hour after eating;
- Do not use excessive force when using this appliance to avoid injury;
- It is forbidden to carry fragile, explosive and flammable items such as mobile phones and lighters in the massage and compressed areas.

### 2. Use environment

- Do not use this appliance in a highly humid environment;
- Do not use this appliance immediately when the ambient temperature changes sharply;
- Do not use this appliance in an environment with severe dust or corrosive gas;
- Do not use this appliance in a small space or a place with poor air circulation;
- Normal room temperature 0C to 35°C;
- At a relative humidity of 20% to 80%, do not use this appliance in an excessively humid room (such as a bathroom);
- Do not use this appliance outdoors;
- Avoid direct sunlight;
- Keep this appliance away from heat sources (such as the side of the stove, the air outlet of

## Safety and maintenance matters

- Do not use this appliance when the body is wet;
- The appliance has a heating surface, so people who are not sensitive to heat must be careful when using it.

### 4. Safety matters


- Check whether the voltage meets the specifications of this appliance;
- Do not use wet hands to pull or plug the power plug;
- Do not allow water to enter this appliance to avoid electric shock or damage to this appliance;
- Do not pull the power cord when plugging or unplugging the power plug, and don't be too rough;
- Do not damage the wire or tamper with the circuit of this appliance;
- Do not use a damp cloth to clean the live parts such as the power switch and plug of this appliance;
- In the event of a power failure, you should leave the appliance to avoid injury when the power is suddenly restored;
- If you feel that this appliance is abnormal during use, please stop using it immediately and consult your local supplier;
- If you feel an abnormality during the use of this device, please stop using it immediately and consult a healthcare practitioner;
- This device is not intended to be used by people (including children) who are physically disabled, sensory or neurologically defective, or lack experience and common sense, unless they are supervised and guided by those responsible for their safety on how to use the device. Children must be supervised to ensure that they do not use equipment to play with;
- If the power cord is damaged, in order to avoid danger, it must be replaced by professionals from the manufacturer, its maintenance department or similar departments.

### 5. Product care and maintenance

- This appliance can only be repaired by the service center designated by the manufacturer, and the user cannot disassemble or repair it by himself;
- Please remember to turn off the main power switch after use;
- Do not use this appliance when the power socket is loose;
- If the appliance will not be used for a long time, the power cord of this appliance should be rolled up and stored in a dry and dust-free environment;
- Do not store this appliance near high temperature or open flame, and do not expose it to direct sunlight for a long time;
- Please clean this appliance with a thousand cloth, do not use thinner, benzene or alcohol;
- The mechanical device of this appliance is specially designed and manufactured without special maintenance;
- Do not pierce this device with sharp objects;
- Do not roll or drag this appliance on uneven ground, it needs to be lifted and moved;

## Button function of hand control





### Boot up

- Standby key: Press the "  " key to turn on/off the massage function of the whole machine.
- When the power is turned on, press this button to lie down to the initial angle. After completion, the first automatic program "President Health Care" will run by default. The default working time is 20 minutes. Press this button again and wait for another 20 seconds. Turn off all functions of the massage chair.


### Automatic mode

- Automatic massage program key: According to your physical condition and massage time, you can choose any of the five types of massage: "Royal Treatment", "Queen Slimming", "Neck& Shoulder", "Waist & Spine", "Relax" Program for targeted massage. (See the LCD screen instructions for details)

### Other functions

- Heating: Press the "  " button to turn on/off the waist heating function, long press for 3 seconds to turn on and off the ambient light, and long press again for 3 seconds to turn on the ambient light.
- Foot roller: Press the "  " key to turn on/off the foot roller;
- Timing: Press the "Timing" button to choose 5/10/15/20/25/30 minutes timed massage;
- Pause: Press the "Pause" button to stop the massage program operation function;
- Zero Gravity: Press the "Zero Gravity" button to turn on/off the zero gravity, long press the "  " button to raise the backrest, and long press the "  " button to lower the backrest;
- Air Zone: press the "Air Zone" button to fix the airbag massage part of the arm, shoulder, calf, etc;
- Airbag strength: press the "airbag strength" key to adjust the airbag massage strength to three levels;
- Partial massage: Press the "partial massage" button to adjust the massage parts of the manipulator, such as the neck, shoulders, back, waist, buttocks, thighs and other interval massages;
- Neck: Press "Neck" to turn on neck massage, and press "Neck" again to turn off neck massage.
- Neck/Up: press "Neck/Up" to adjust the neck massage head lift.
- Neck/Down: press "Neck/Down" to adjust the neck massage head down.
- Back: There are 5 modes in the back massage mode, and the 6th level turns off the back massage and cycles in sequence.
- Strength: Press "Strength" to adjust the strength of the back and back to three levels
- Hip roller: press "Hip roller" to adjust the three speed adjustment of the hip roller.


# Hand control introduction

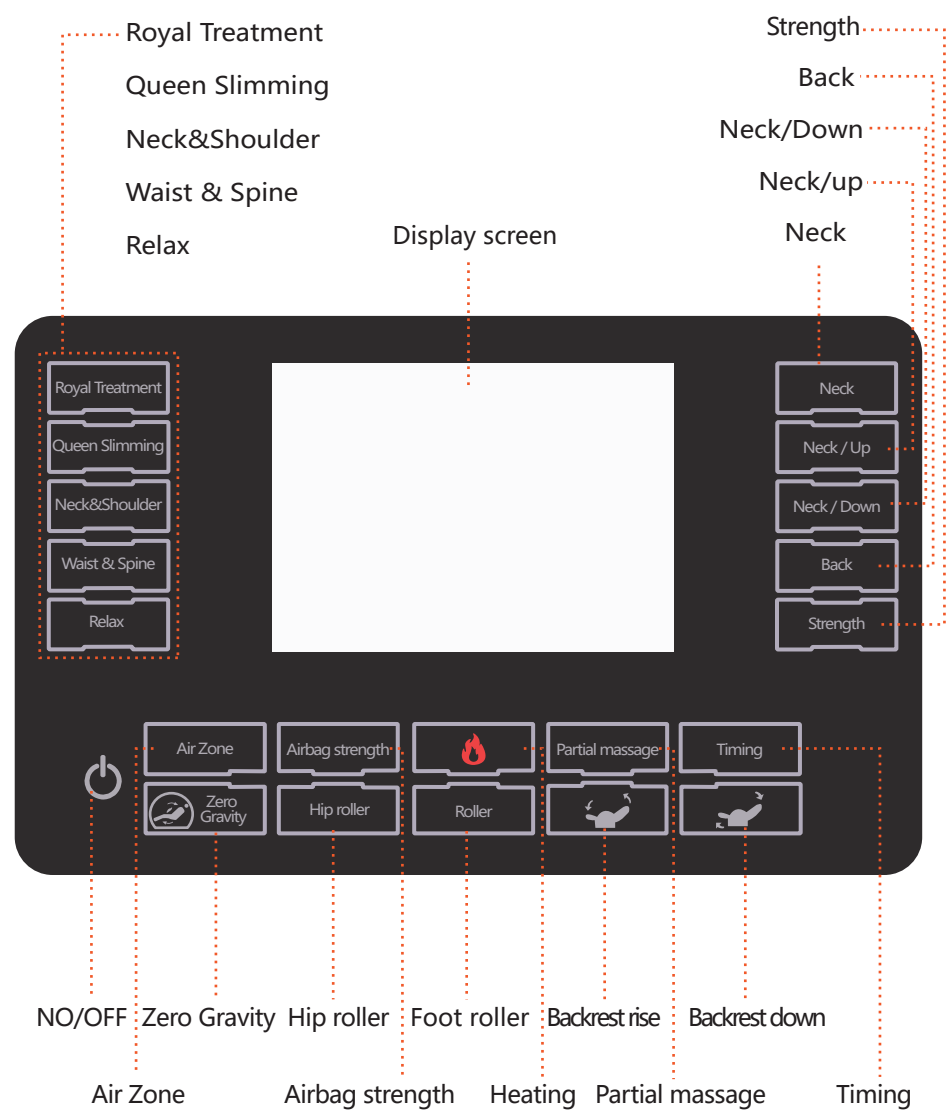

# Use safety warning


## ! warn

When the calf frame of the massage chair rises, people must not apply gravity to the calf frame to prevent the massage chair from falling forward to avoid product damage or personal injury.

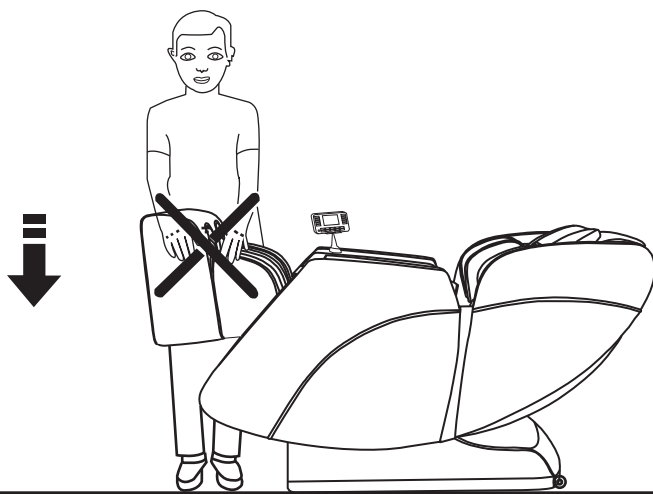


## ! warn

Before sitting on the massage chair, it is necessary to confirm that the massage manipulator cannot stay in the cushion position, so as to avoid discomfort to the buttocks and damage to the massage manipulator during the downward pressure of the human body.

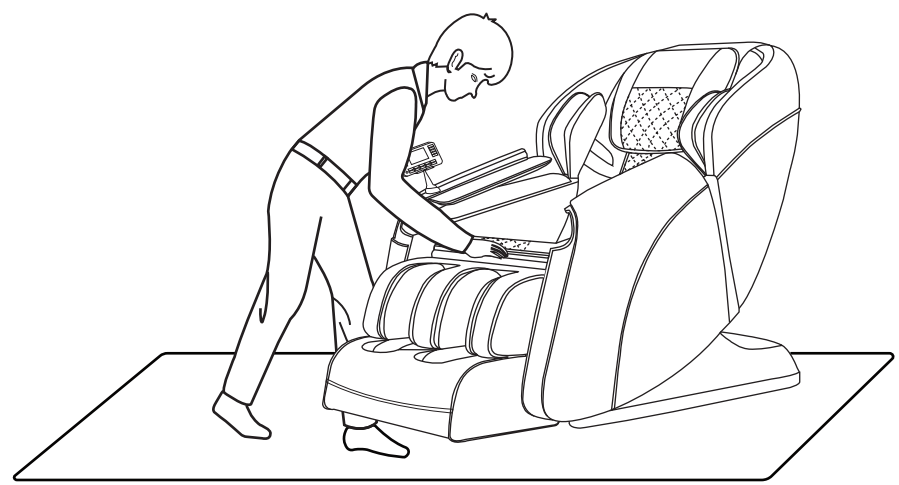

## Part Name

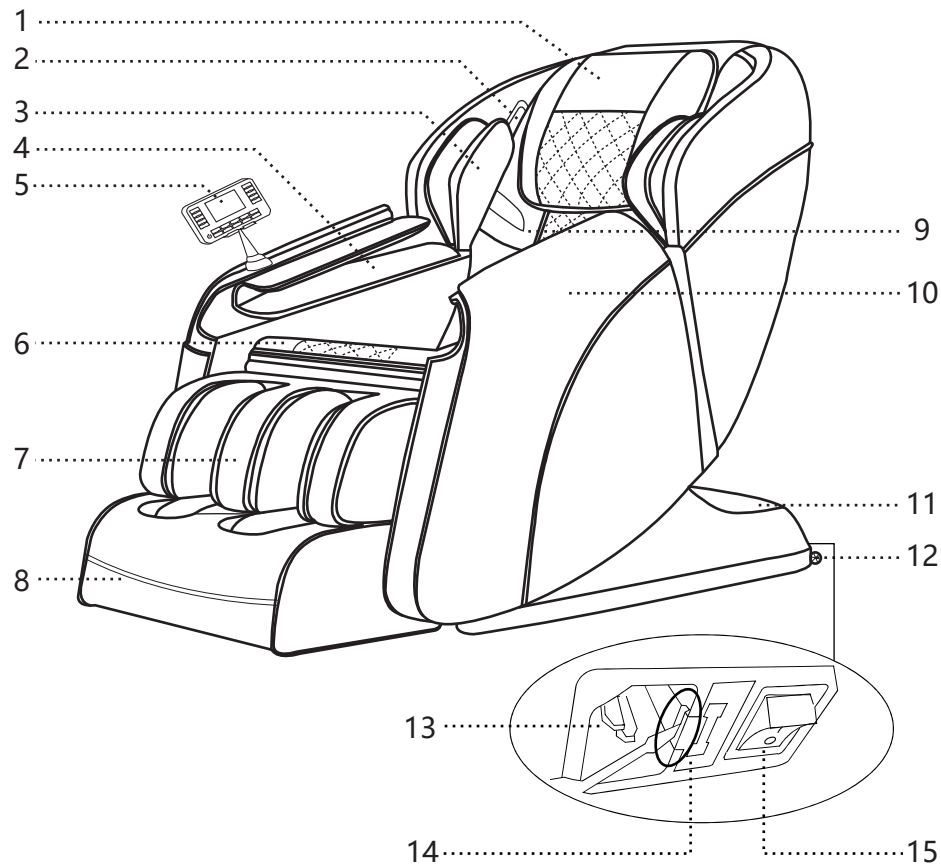

1. Head cushion    2. 3D digital audio    3. Shoulder air pressure components  
 4. Arm air pressure component    5. Large screen controller    6. Cushion  
 7. Calf air pressure component    8. Plantar roller    9. Back cushion  
 10. Handrail    11. The back cover of the power box    12. Move the scroll wheel  
 13. Power cord jack    14. Fuse    15. Power switch

## Product Features

- This product is designed with a set of 3D manipulators that can walk up and down, extend back and forth, and have a silent design.
- It is designed with shoulder position automatic detection and fine adjustment function; automatic detection of human body curve and massage acupressure points, automatic adjustment of the front and back expansion of the manipulator according to the detected human body curve and massage acupressure points, making the massage more humane and scientific sex.
- Equipped with characteristic automatic massage functions: five kinds of automatic massage functions: President's health preservation, queen slimming, shoulder improvement, back care, and peaceful sleep.
- Equipped with manipulator manual massage range selection: five kinds of massage range selection including fixed point, upper back, lower back, partial and full massage.
- With manual massage function: including stop, kneading, tapping, kneading tapping, acupressure, percussion and other eight massage methods to choose from.
- Equipped with massage adjustment function: including 3D intensity adjustment in 3 levels, air pressure intensity in 3 levels, and time in 3 levels.
- Equipped with upper body air massage function: palm air massage function (built-in 4 airbags), shoulder air massage function (built-in 4 airbags), arm air massage function (built-in 4 airbags), three-level air pressure intensity adjustment.
- Equipped with lower body air massage function: calf air massage function (built-in 12 airbags), three levels of air pressure intensity adjustment.
- The slide rail technology is used for the backrest frame to lie down, so that the backrest is 8 cm away from the wall, saving space to the greatest extent.
- The rail of the backrest frame adopts the curve rail technology, which completely fits the curve of the human back, and you can enjoy a close-fitting massage from the head to the thighs.
- There are bump massage and magnetic therapy functions in the left and right palm airbag bags.
- Equipped with back heating function: using far-infrared heat source.
- Music player system, built-in 3D digital audio on the left and right upper arms. The Bluetooth function of the smart device can be used to connect wirelessly and play music.
- Equipped with separate lifting adjustment function of the calf frame, linkage lifting adjustment function of the backrest frame, and automatic lying angle adjustment function of zero gravity.
- Equipped with foot sole roller massage function, three sets of rollers roll to massage the toes and the roots of the feet, and the arches of the feet are rolled to massage; the speed is adjustable in three gears.
- The calf rest is equipped with elastic yellow telescopic adjustment function, the foot extension length is determined according to the user's leg length, the foot contraction is retracted by the spring force.
- Auto-up function when shutting down, automatic reset function of manipulator.
- Configure a large-screen hand controller.